


HYDRAULIC POWERED WINCH

OWNER'S & OPERATOR'S MANUAL

Effective September 26, 2024

Publication No. 1042601

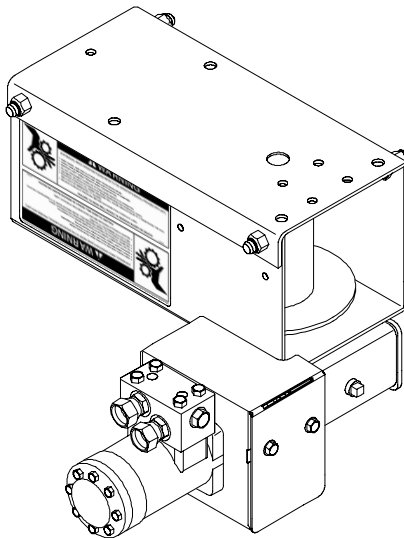

HUTCHINSON  MAYRATH 

Hutchinson | Mayrath • 514 W. Crawford • Clay Center, KS. USA 67432

P 785.632.2161 • F 785.632.5964 • TF 800.523.6993

hutchinson-mayrath.com

aggrowth.com



GENERAL SAFETY STATEMENT

This manual was written with the safety of the operator and others who work with the equipment as our prime concern. The instructions presented will help the reader learn **SAFE** day to day work practices. We want you as our partner in safety.

It is your responsibility as an owner, operator or supervisor to know what specific safety requirements and precautions exist and to make these known to all other personnel working with the equipment or in the area, so that they too may safely perform their duties and avoid any potentially hazardous situations.

Please remember safety equipment provides important protection for persons around a grain handling system that is in operation. Be sure **ALL** safety shields and protection devices are installed and properly maintained. **If any shields or guards are damaged or missing, contact your dealer to obtain the correct replacement items.**

Avoid any alterations of the equipment. Such alterations may create a dangerous situation where serious injury or death may occur.

SAFETY ALERT SYMBOL

The safety symbol shown is used throughout this manual to alert you to information about unsafe actions or situations, and will be followed by the word **DANGER, WARNING, or CAUTION.**

DANGER - Indicates immediate hazards that may result in severe injury or death. **WARNING** - Indicates unsafe actions or situations that may cause severe injury, death and/or major equipment or property damage. **CAUTION** - Indicates unsafe actions or situations that may cause injury, and/or minor property damage.

Watch this symbol - it points out important safety precautions. It means - **ATTENTION! Become alert! Your safety and the safety of others is involved!** Read the message that follows the symbol when a warning is given, be alert to the possibility of personal injury or death.



SAFETY DECALS

Check to ensure all Safety Decals are present and in good condition. If a decal cannot easily be read for any reason, or has been painted over, replace the decal immediately. Safety decals are offered free of charge, and can be ordered through your Hutchinson/Mayrath dealer or directly from the factory.



**“WARNING” Safety Decal
Part No. 1006559**

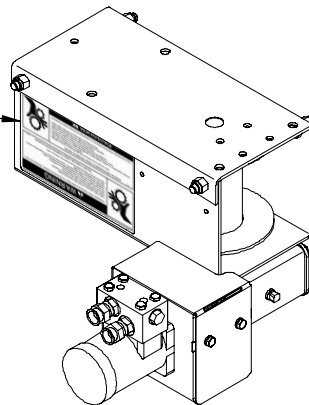


TABLE OF CONTENTS

SAFETY 1

 General Safety Statement 1

 Safety Alert Symbol and Safety Decals 1

TABLE OF CONTENTS 2

GENERAL INFORMATION 3 - 5

 Operator Qualifications and Sign-Off Sheet 3

 Right and Left Side Designation, Serial No. Information 3

 Hydraulic Components 4

 Winch Operation 5

 Transporting Auger 5

 Winch Maintenance 5

ASSEMBLY INSTRUCTIONS 6 - 7

 Hydraulic Winch Installation 6-7

HYDRAULIC COMPONENTS PARTS LIST 7

WINCH PARTS LISTS P-1

WARRANTY W-1



WARNING!

Anyone who will operate or work around this machine shall first read this manual! This manual must be delivered with the equipment to its owner. Failure to read this manual and its safety instructions is a misuse of the equipment.

OPERATOR QUALIFICATIONS

Operation of this winch shall be limited to competent and experienced persons. In addition, anyone who will operate or work around the winch must use good common sense. In order to be qualified, the operator must also know and meet all other requirements, such as:

1. Some regulations specify that no one under the age of 16 may operate power machinery. This includes this winch. It is your responsibility to know what these regulations are in your area or situation.
2. Current OSHA regulations state in part: "At the time of initial assignment and at least annually thereafter, the employer shall instruct every employee in safe operation and servicing of all equipment which the employee is, or will be involved with." *

3. Unqualified persons are to stay out of the work area. See page 4.
4. A person who has not read and understood all operating and safety instructions is not qualified to operate the machine.

*Federal Occupational Safety & Health Standards for Agriculture Subpart D, Section 1928.57 (a) (6).

SIGN-OFF SHEET

As a requirement of OSHA, it is necessary for the employer to train the employee in the safe operation and safety procedures with this auger.

We include this sign off sheet for your convenience and personal record keeping.


<i>Training Sign-Off Sheet</i>		
Date	Employer Signature	Employee Signature

RIGHT and LEFT SIDE DESIGNATION

When referencing the left, right, front or rear of the unit, it is always determined by standing at the inlet end of the auger and looking towards the discharge end.

HYDRAULIC COMPONENTS

 WARNING! Hydraulic systems are highly pressurized. Do Not connect or disconnect hydraulic components when there is pressure within the system.



Escaping hydraulic oil, even an invisible pin hole leak can penetrate body tissues and cause serious injury.

Use a piece of wood or cardboard when searching for leaks, Never use your hands or other parts of your body.

If injured by hydraulic oil escaping under pressure, see a doctor immediately. Serious infection or reaction can occur if medical attention is not received at once.



- Use “quick attach” type hydraulic fittings to connect the winch hydraulic hoses to the tractor.
- The fittings required for attaching the hoses to the tractor are not furnished. **Two (2) 1/2” NPT female fittings are needed for attaching the hose ends to the tractor fittings.**
- Check hoses, fittings and connectors for leaks. Repair or replace as necessary.
- Allow hoses to coil in their original shape. Avoid pinching, crimping or twisting the hoses that would otherwise restrict the flow of the hydraulic system.
IMPORTANT! Keep hydraulic hoses away from moving parts. Make sure to secure the hoses in a manner that they cannot become damaged when transporting the auger.
- When not in use, make sure the fittings on the end of the hoses are protected from dirt and other contaminants.
- Never remove the winch hoses or fittings from the winch unless the unit is fully lowered with the lift arm against the upper stop. Relieve hydraulic pressure before disconnecting hydraulic lines.
- The hydraulic motor and its connecting hoses and end fittings, will lock the worm gear winch and prevent any “creep down” of the raised unit.

The winch is shipped **with oil already installed.**

Refer to the following instructions for checking oil level and for adding oil to the winch gearbox.

1. Place the auger in as horizontal position as possible (auger will need to be in the full down position and as **level as possible** for an accurate reading).
2. Remove one of the plugs from the gearbox (there are four different plugs that can be used for checking and adding oil, use plug that works best for you). Oil should begin to leak from the opening. If it does, oil level is sufficient, reinstall plug.

If additional oil is needed, Use a syringe type device, and add oil. Add oil until it begins to flow out of the level check plug opening. Reinstall plug. **Do Not overfill. Too much oil may damage the seals.**

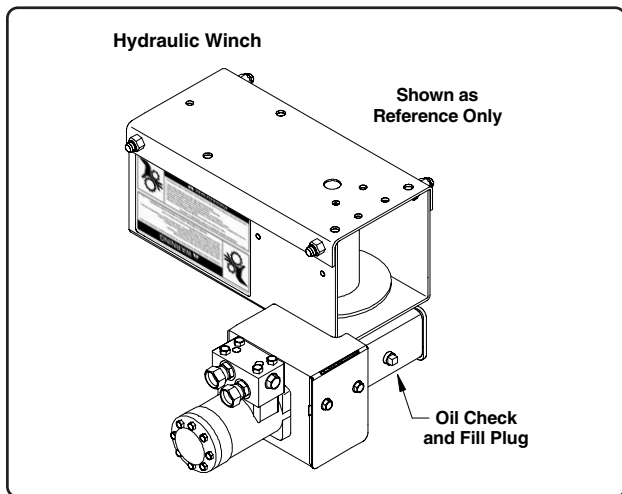




Fig. 1


When additional oil is required, we recommend the use of an **SAE 85W140** non-foaming multipurpose gear oil. **Capacity: 8 oz. (.24 L).**


Use a grade/brand that is commercially available for automotive differentials. Extra pressure additives may be of some value in severe applications.


WINCH OPERATION


 **WARNING! Keep hands, hair and clothing away from moving parts. Do Not use hands to guide the cable onto the winch drum during winch operation.**

 
 **When raising or lowering the auger, be aware and avoid overhead obstructions and electrical power lines.**


 **Watch cable to see that it is properly winding onto the winch drum.**

 **Never fully extend the cable, always keep three (3) complete wraps of cable around the winch drum.**

 **Keep all guards and shields in place. Do Not operate winch with kinked or damaged cable.**

 **Do Not continue to raise auger after undercarriage trolley reaches track stop.**

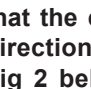 **Be aware of overhead obstructions and electrical lines and avoid them.**

 **Keep all guards and shields in place. Shut off and lock out power source to adjust, service or clean.**

The hydraulic winch will operate in either direction. This depends on which port is connected to pressure. If the drum should rotate in the opposite direction desired, simply reverse the hydraulic hoses on the relief valve.

Note: The direction of drum rotation should be so that the cable wraps around the drum in the same direction as it was attached to the drum (refer to Fig 2 below).

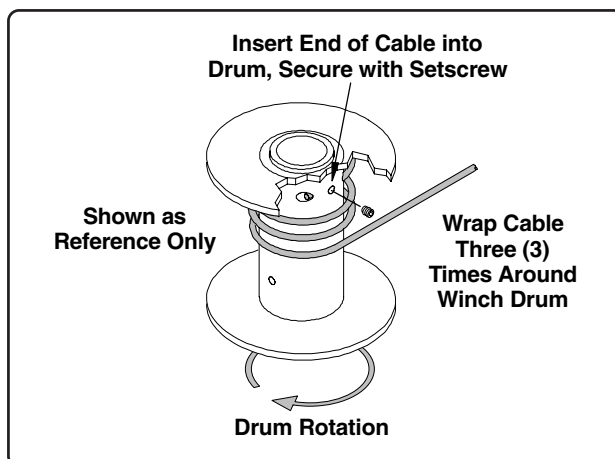


Fig. 2

The hydraulic system on the winch has a pressure relief to protect against overloading. If the winch fails to function, check for interference such as binding of the cable or slide. It is recommended that you do not allow anyone who is not familiar with these operating instructions to operate this winch.

Note: This winch is not designed to be a human hoist and should never be operated when there are persons positioned under, or near the auger when raising or lowering.

Operator's must pay attention when raising and lowering the auger.

TRANSPORTING AUGER

Always transport auger in the full down position. The lift arm of the undercarriage should be seated against the down position stop with slight tension on the winch cable and at least three (3) wraps of cable around the winch drum. **Refer to the Owner's and Operator's manual that came with your auger for complete procedures and guides for transporting the auger.**

WINCH MAINTENANCE

1. Check that the winch is secure and properly mounted to the auger.
2. Check winch cable periodically. Damaged, kinked or frayed cable must be replaced (always replace cable with the same type and size as the original).
3. Check hydraulic hoses and fittings for leakage. Ensure all connections are tight and check hoses for damage.
4. Check oil level in winch gearbox periodically. Refer to the Hydraulic Components Section on Page 4 for proper filling procedures.

ASSEMBLY INSTRUCTIONS

HYDRAULIC WINCH INSTALLATION

Note: Winch mounting procedures will differ on various auger models. The following instructions show the installation using band clamps.

Refer to the Owner's and Operator's manual that was provided with your auger for the proper mounting of the winch.


1. Remove the top plate from the winch frame body as shown below (remove the four 1/2" x 1 1/4" bolts and nylon locknuts and retain for reassembly).
2. Bolt the half-band mounting bracket to the top plate using one (1) 3/8" x 1 1/4" bolt and nylon locknut.
3. Fasten the top plate to the winch mount that is welded to the auger housing. Secure top plate using four (4) 3/8" x 1 1/4" bolts and nylon locknuts (install bolt heads from the bottom side of the top plate).

On some longer length augers use four 1/2" x 1 1/2" bolts and nylon locknuts (refer to the Owner's and Operator's manual that was provided with your auger to ensure the correct bolt size is used).

4. Some augers will not use the 2" wide half-band and mounting bracket provided with the kit. For units that do use them, secure the half-bands using two (2) 5/16" x 1 1/2" bolts and non-lock nuts.

Note: If any safety signs on the auger housing are covered by the mounting bracket, or the 2" wide half-band, order new safety signs and relocate them so they are completely visible.

Safety signs can be obtained free of charge from your Hutchinson/Mayrath dealer or they can be ordered directly from the factory.

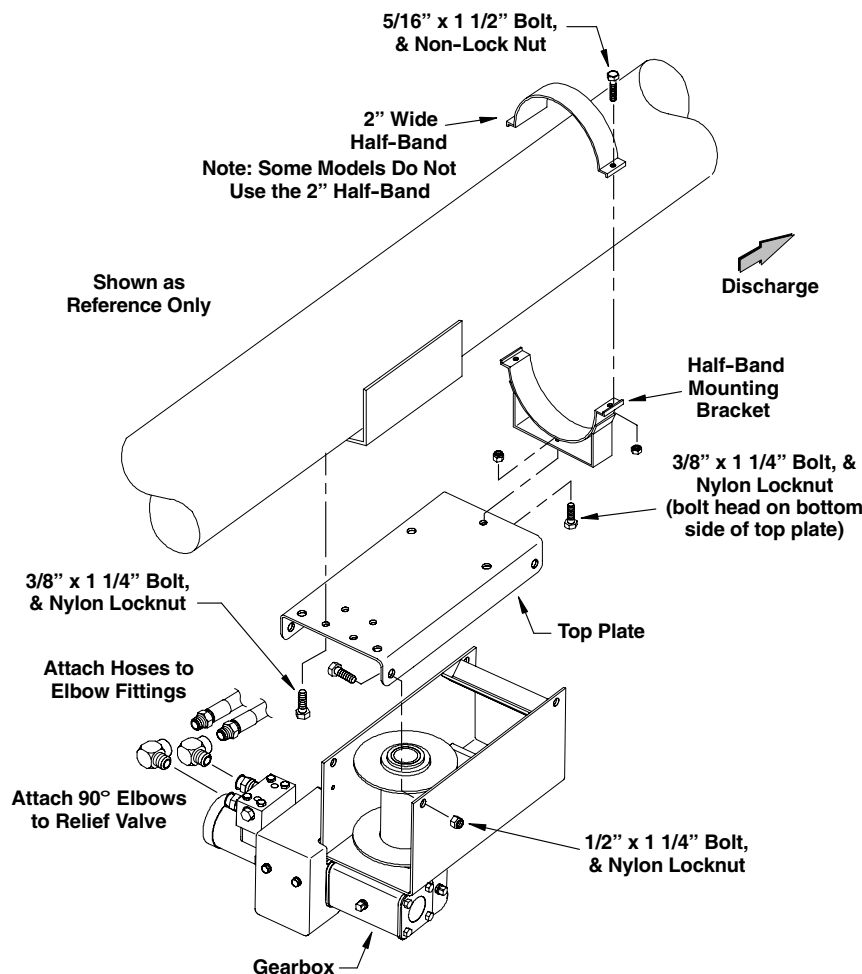

HYDRAULIC WINCH INSTALLATION (con't.)

The winch is shipped with oil already installed.

Refer to Page 4 for correct filling and level check procedures.

5. Attach the winch frame body to the top plate previously mounted to the auger housing.

Note the guide pin welded to the underneath side of the top plate. This will be inserted into the center of winch drum.

Secure the winch body using the 1/2" x 1 1/4" bolts and nylon locknuts previously removed.

6. Connect the 90° hydraulic elbows to the hydraulic fittings on the pressure relief valve (See illustration on Page 5 and the illustration below).

Apply thread sealant or equivalent to the threads on the hose ends and attach hoses to elbow fittings.

Route hoses to the inlet end of the auger securing the hoses every so often along the length of the auger to keep them from being damaged (use hose clamps or similar items to secure the hoses).

IMPORTANT! Keep hydraulic hoses away from moving parts and pinch points. Allow hoses to coil in their natural shape.

Avoid pinching or twisting the hoses that would otherwise restrict the flow of hydraulic oil.

7. Attach the lift cable to the winch drum. Make three (3) wraps of cable around the winch drum, then insert the cable end into one of the larger holes in the drum (it may be necessary to loosen the setscrew to allow the cable to slide into the opening).

Make sure the cable is wrapped around the drum in the same direction as it was attached (See Fig. 3).

8. Tighten the setscrew to secure the cable to the winch drum. Keep a bit of tension on the cable to help it stay wrapped around the drum.


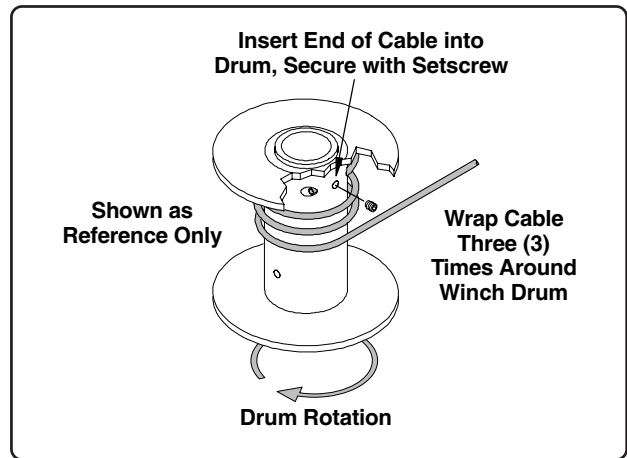


Fig. 3

HYDRAULIC COMPONENTS

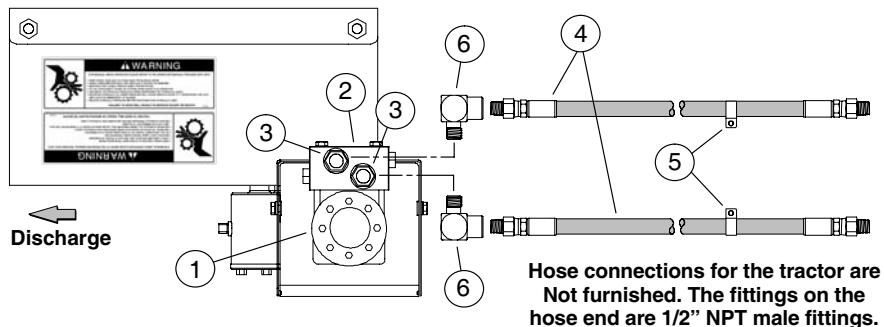


Ref. No.	Part No.	Description
1	41133	Hydraulic Motor
2	1022004	Pressure Relief Valve
3	1022123	Hydraulic Adapter
4	----	Hydraulic Hose, 3/8"

Ref. No.	Part No.	Description
5	1006324	Clamp, Hydraulic Hose Mount
6	106413	Elbow, 90° Hydraulic (1/2" male to 1/2" female NPT)

Refer to Page 8 for parts breakdown of the winch

PARTS LIST

HYDRAULIC WINCH

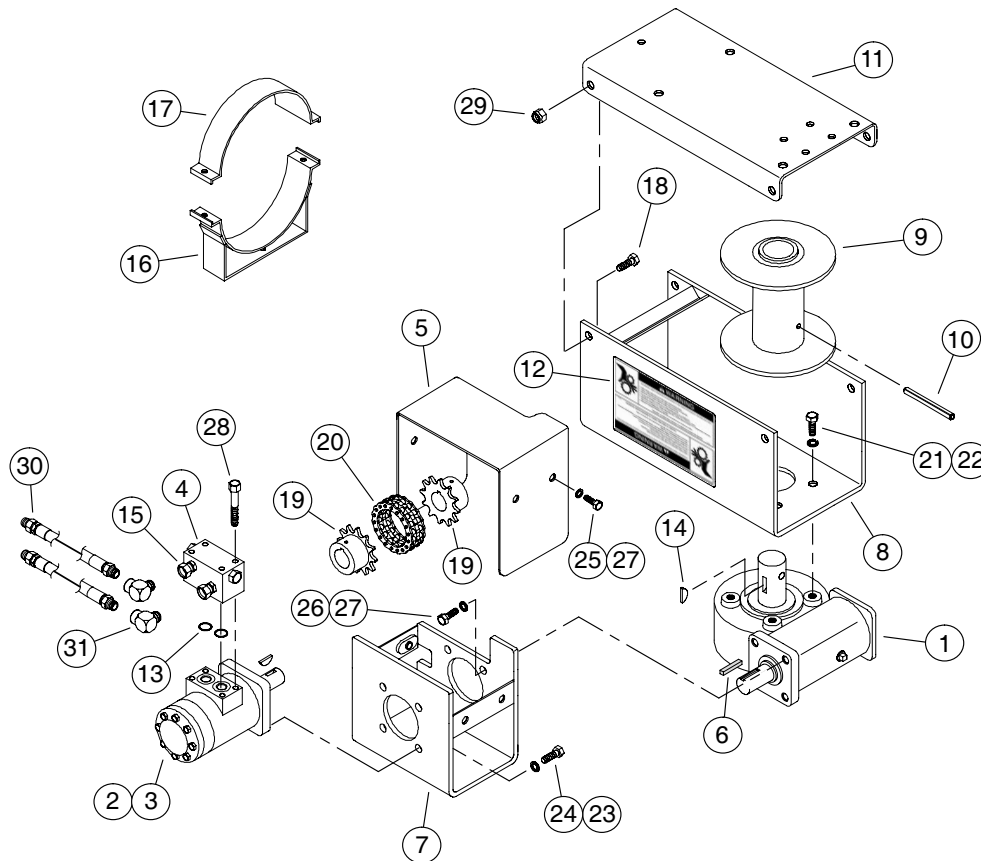

Complete Winch Assembly, Part No. 1006526

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1	1034615	Superior Gearbox, 20:1	(16)	1006953	Bracket, Band-On f/ 10"
2	41133	Hydraulic Motor, "H" Series	17	5033A1	Half-Band, 2" Wide f/ 8"
3	---	Woodruff Key included w/ hydr. motor	(17)	1047238	Half-Band, 2" Wide f/ 10"
4	1022004	Valve, Pressure Relief	18	33082	Bolt, 1/2-13 x 1 1/4" G5 PLT
5	1043177	Shield f/ Hydraulic Winch	19	3198A1	Flex Coupler, RC 1.000 Half
6	8371C	Key, 1/4" sq. x 1 1/2" long	20	3146A91	Chain, RC-60
7	1043180	Hydraulic Motor Mount	21	33294	Bolt, 1/2-13 x 1" G5 PLT
8	1007014	Frame Weldment w/ Decal	22	D1143	Lock Washer, 1/2" PLT
9	1006520	Drum Weldment	23	33309	Bolt, 3/8-16 x 3/4" G5 PLT
10	33190	Roll Pin, 5/16" x 2 1/2" long	24	D1150	Lock Washer, 3/8"
11	1006523	Frame Top Plate	25	4701-1	Bolt, 5/16" 18 x 3/4" G5 PLT
12	1006559	Warning Decal	26	33046	Bolt, 5/16-18 x 1" G5 PLT
13	41129	O-Ring f/ Pressure Relief Valve	27	33144	Lock Washer, 5/16" PLT
14	1007288	Woodruff Key #1008	28	1002217	Bolt, 5/16-18 x 2 1/2" G5 PLT
15	1022123	Hydraulic Adapter w/ Restrictor	29	33138	Nut, 1/2-13 Nylon Lock PLT
16	1006952	Bracket, Band-On f/ 8"	30	----	Hose, Hydraulic, 3/8"
			31	106413	Elbow, 90° Hydraulic

AG GROWTH INTERNATIONAL INC. – FORM OF LIMITED WARRANTY

Ag Growth International Inc. (“AGI”) warrants that the goods and/or services being supplied (the “Goods”) will be free from defects in materials and workmanship under normal conditions, use, service, and maintenance, for a period of twelve (12) months from the date of first operation of the Goods, but in no event more than eighteen (18) months from the date of delivery of the Goods to the end-user (the “Warranty Term”). If the Goods are being used for rental purposes, the Warranty Term for the subject Goods shall be limited to 90 days.

Subject to AGI’s sole discretion, if the Goods, or a component thereof, are found to have a default in materials and/or workmanship within the Warranty Term, AGI will, at its own option and expense, repair or replace the subject Goods or refund the purchase price for the applicable Goods. Any warranty related expenses incurred on behalf of or by the end-user without the prior written consent of AGI shall be the sole responsibility of the end-user. Expenses relating to travel, customs or import duties and tariffs, equipment rental, and any costs associated with accessing the Goods are the sole responsibility of the customer. Warranty shall be void in the event the Goods are returned or disposed of without the written consent of AGI.

The customer shall not assert a claim that the Goods are defective unless the customer gives written notice to AGI of such defect within forty-eight (48) hours of discovering such defect. In the event of a warranty claim, the customer must complete any and all information required by AGI in order to properly assess or investigate the claim. AGI shall be given a reasonable opportunity to inspect and test the Goods in question. Failure by the customer to notify AGI of such claim within 48 hours shall operate as a waiver of any and all such claims by the customer.

THIS IS THE SOLE AND EXCLUSIVE WARRANTY GIVEN BY AGI WITH RESPECT TO THE GOODS AND IS IN LIEU OF AND EXCLUDES ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, ARISING BY OPERATION OF LAW OR OTHERWISE, INCLUDING WITHOUT LIMITATION, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE WHETHER OR NOT THE PURPOSE OR USE HAS BEEN DISCLOSED TO SELLER IN SPECIFICATIONS, DRAWINGS, OR OTHERWISE, AND WHETHER OR NOT AGI’S GOODS ARE SPECIFICALLY DESIGNED AND/OR MANUFACTURED BY AGI FOR BUYER’S USE OR PURPOSE.

This limited warranty extends solely to Goods manufactured by AGI and does not cover any third-party parts, components, or materials. To the extent permitted by the manufacturer, AGI will pass on applicable warranties on third-party parts, components or materials to the end-user. This warranty does not extend to any losses or damages due to misuse, use of a kind and/or to a degree not reasonably expected to be made of the Goods, any use of the Goods which is not an intended use as specified in AGI’s published product literature or otherwise specified by AGI in writing, accident, acts of God, abuse, neglect, normal wear and tear (including corrosion and cosmetic issues), any equipment attached to or used in conjunction with the Goods, any field modifications or substitutions to original Goods, component damage incurred during shipping and handling, unauthorized modification or alteration, used beyond rated capacity, or improper installation, maintenance or application.

THE SOLE AND EXCLUSIVE REMEDY FOR ANY CLAIM HEREUNDER SHALL BE LIMITED TO REPAIR, REPLACEMENT, OR REFUND OF THE PURCHASE PRICE. AGI SHALL NOT BE LIABLE FOR DAMAGES CAUSED BY DELAY IN PERFORMANCE AND IN NO EVENT, REGARDLESS OF THE FORM OF THE CLAIM OR CAUSE OF ACTION (WHETHER BASED IN CONTRACT, INFRINGEMENT, NEGLIGENCE, STRICT LIABILITY, OTHER TORT OR OTHERWISE), SHALL AGI’S LIABILITY TO BUYER AND/OR ITS CUSTOMERS EXCEED THE PURCHASE PRICE OF THE GOODS. BUYER AGREED THAT IN NO EVENT SHALL AGI’S

WARRANTY

LIABILITY TO BUYER AND/OR ITS CUSTOMERS EXTEND TO INCLUDE INCIDENTAL, CONSEQUENTIAL, OR PUNITIVE DAMAGES. THE TERM "CONSEQUENTIAL DAMAGES" SHALL INCLUDE, BUT NOT BE LIMITED TO, LOSS OF ANTICIPATED PROFITS, LOSS OF USE, LOSS OF REVENUE, FAILURE TO MEET GOVERNMENT AND/OR ADMINISTRATIVE REQUIREMENTS, CLEAN UP COSTS, COST OF CAPITAL AND DAMAGE OR LOSS TO OTHER GOODS, PROPERTY OR EQUIPMENT.

To the fullest extent permitted by law, Buyer, on behalf of itself, its suppliers, their agents, employees or any entity or person for which Buyer is or may be responsible ("Indemnitors") shall fully indemnify, save and hold AGI, its agents, employees, officers, directors, partners and related entities harmless from and against all liability, damage, loss, claims, demands, actions and expenses of any nature whatsoever, including, but not limited to reasonable attorney's fees which arise out of or are connected with: (a) any negligent act, error or omission by any Indemnitor in the performance of this agreement; (b) the failure of the Indemnitor to comply with the laws, statutes, ordinances or regulations of any governmental or quasi-governmental authority; or (c) the material breach of any term or condition of this agreement by any of the Indemnitors. Without limiting the generality of the foregoing, the indemnity hereinabove set forth shall include all liability, damage, loss, claims, demands, and actions on account of personal injury, death or property loss to any third party, any Indemnitee, any of Indemnitee's employees, agents, licensees or invitees. The indemnity set forth herein shall survive any termination of this agreement.

THIS WARRANTY IS NON-TRANSFERABLE AND APPLIES ONLY TO THE ORIGINAL END-USER AND SHALL BE CONSIDERED VOID IF NOT REGISTERED WITHIN 30 DAYS OF RECEIPT OF THE GOODS BY THE ORIGINAL END USER.

HUTCHINSON MAYRATH

MANUFACTURED BY
HUTCHINSON | MAYRATH

514 W. Crawford Street
Clay Center, Kansas
USA 67432

TF 800.523.6993
P 785.632.2161
F 785.632.5964

hutchinson-mayrath.com