

MKX², X², HX² 13 Series

Swing-Away Grain Auger Operator's Manual


This manual applies to:

AGI Westfield MKX² 13 (64/74/84/94/114)

AGI X² 13 (114)

AGI Hutchinson HX² 13 (64/114)

AGI Mayrath HX² 13 (64/114)

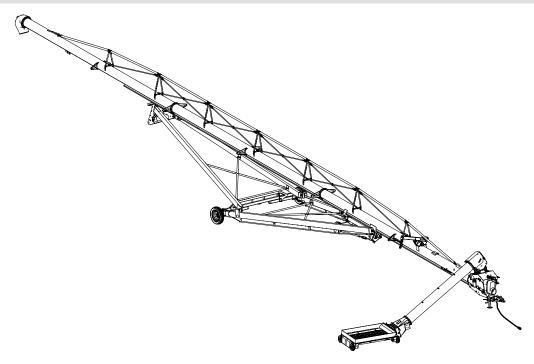



LOOKING FOR PARTS?

Check out our online Parts Catalog!



Read this manual before using product. Failure to follow instructions and safety precautions can result in serious injury, death, or property damage. Keep manual for future reference.

Part Number: 31175 R3

Original Instructions

Revised: April 2025

This product has been designed and manufactured to meet general engineering standards. Other local regulations may apply and must be followed by the operator. All personnel must be trained in the correct operational and safety procedures for this product. Use the sign-off sheet below to record initial and periodic reviews of this manual with all personnel.

Date	Employee Name and Signature	Employer Name and Signature
	+	

CONTENTS

1. Intro	oduction	6
	1.1 Serial Number Location	6
	1.2 Product Registration	7
	1.3 Intended Use	
	1.3.1 Misuse	
2 6 6		_
	ty	
	2.1 Safety Alert Symbol and Signal Words	
	2.2 General Safety Information	
	2.3 Rotating Flighting Safety	
	2.4 Overhead Power Lines	
	2.5 Upending	
	2.6 Rotating Parts Safety	
	2.7 Work Area Safety	
	2.8 Guards Safety	
	2.9 Raising and Lowering the Auger	
	2.10 Hand Winch Safety	
	2.11 Hydraulic Winch Safety	
	2.12 Positioning the Auger	
	2.13 Towing the Auger	
	2.14 Drives and Lockout Safety	
	2.14.1 PTO Driveline Safety	
	2.14.2 Hydraulic Power Safety	
	2.15 Tire Safety	
	2.16 Personal Protective Equipment	
	2.17 Safety Equipment	
	2.18 Safety Decals	
	2.18.1 Decal Installation/Replacement	
	2.18.2 Safety Decal Locations and Details	17
3. Feat	ures	34
4. Tran	sport	38
	4.1 Transport Safety	
	4.2 Transport Preparation	
	4.3 Connect the Auger to the Towing Vehicle	
	4.4 Position the X-Tend for Transport	
	4.5 Auger Steer Transport Position	
5 Place	ement	44
	5.1 Placement Safety	
	5.2 Positioning the Auger	
	5.2.1 Raising and Lowering the Auger	
	5.3 Extendable Axle Positioning	
	5.4 Extendable Axle Positioning with an Auger Steer Kit	
	5.5 Hitch Adjustment	
	5.6 Auger-to-Tractor Hookup	
	5.7 Raising and Lowering the Intake Hopper	
	5.7.1 Swing-Away Hydraulic Winch Operation	
	5.8 Grain Hopper Positioning	
	11 = ==== U	

	5.8.1 Electric Power Swing Operation	
	5.8.2 Hydraulic Power Swing Operation	56
	5.9 Positioning the Tractor for Right Angle Drive Operation	57
6	. Operation	60
υ.	6.1 Operation Safety	
	6.2 X-Tend Operator Controls	
	6.3 Start-up and Break-in	
	6.4 Operation — PTO Drive	
	6.4.1 PTO Speed Reducer	
	6.4.2 PTO Operation — Forward and Reverse Modes	
	6.5 X-Tend Operation	
	6.6 Auger Steer Operation	
	6.7 Safety Discharge Door	
	6.8 Emergency Shutdown	
	6.9 Restarting with a Full Tube	
	6.10 Bin Level Indicators	
	6.11 Using the Auger with Grain Spreaders	
	6.12 Shutdown	
	6.13 Handling Fertilizer	
	6.14 Storing the Auger	
7.	. Maintenance	
	7.1 Maintenance Safety	
	7.2 Maintenance Schedule	
	7.3 Visually Inspect the Equipment	
	7.4 Lubricate the Equipment	
	7.4.1 Grease Points	
	7.5 Grease and Lubricate the X-Tend	
	7.5.1 Weekly Service for the X-Tend	
	7.5.2 Semi-Annual Service for the X-Tend	
	7.5.3 Annual Service for the X-Tend	
	7.6 Inspect Hydraulic Hoses and Fittings	
	7.7 Lubricate the Upper Bearing	
	7.8 Inspect and Service the Hand Winch and Lift Cable	
	7.9 Inspect and Service the Hydraulic Winch and Lift Cable	
	7.10 Service the Pulleys	
	7.11 Service the Swing Tube Coupler Chain	
	7.12 Service the Gearbox Coupling Shaft	
	7.13 Service the Boot and Hopper Chain Drive	
	7.14 Check Upper and Lower Gearbox Oil Levels	
	7.15 Change the Gearbox Oil	
	7.16 Check Speed Reducer Gearbox Oil Level	
	7.17 Change the Speed Reducer Gearbox Oil	
	7.18 Service the Landing Gear Power Swing Drive Chain	
	7.19 Check X-Tend Chain Tension	
	7.20 Inspect the X-Tend Spline Shaft and Tube	
	7.21 Align the X-Tend Spline Shaft	
	7.22 Clean and Wash the Equipment	
	7.23 Removable Hopper Mesh Guard	
	7.24 Repack the Wheel Bearings with Grease	93

7.25 Check/Adjust the Truss Cables (64/74 Models)	93
7.26 Check/Adjust the Side Truss (84/94/114 Models)	95
7.27 Power Swing Remote Transmitter	96
7.28 Replace the Auger Stabilizer Wear Edge Mounts	97
7.29 Inspect the Retroreflective Strips	97
8. Troubleshooting	100
9. Specifications	103
10. Appendix	105
10.1 Power Swing Remote Transmitter Instructions	
10.2 Programming Receivers	106
10.3 How to Charge the Lift System	107
10.4 Open/Closed-Center Valve Conversion	108
11. AGI Limited Warranty	109

1. Introduction

Follow the instructions in this manual for safe use of this auger. Following proper operation and maintenance will help to keep the auger running in optimal condition.


Keep this manual handy for frequent reference and to review with new personnel. A sign-off form is provided on the inside front cover for your convenience. If any information in this manual is not understood or if you need additional information, please contact AGI or your representative for assistance.

This manual should be regarded as part of the equipment.

1.1. Serial Number Location

The serial number location for your auger is shown in the figure below. Have the serial number ready when ordering parts or requesting service or other information. Record information in the table below for easy reference.

Model Number	
Serial Number	
Date Received	

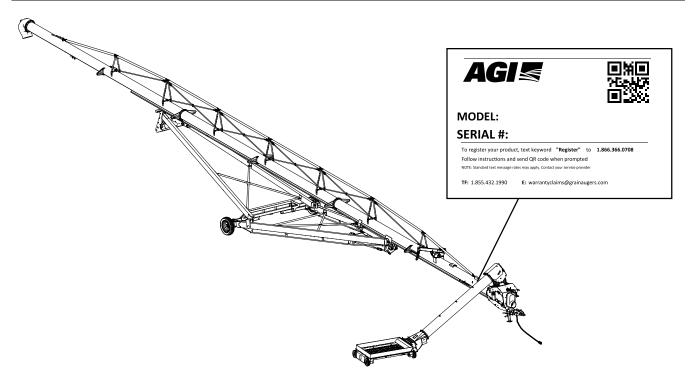

1.2. Product Registration

Register the product to ensure warranty and to receive information about product safety recalls, repairs, and updates.

To register:

- 1. Go to warranty.aggrowth.io/register or scan the QR code.
- 2. On the website, scan the serial number QR code or manually enter the serial number.



1.3. Intended Use

The auger is intended for use as listed below and described throughout this manual. Use in any other way is considered contrary to the intended use and is not covered by the warranty.

Intended use for the auger

• Handling grain, pulse crops, treated seeds, or other similar materials.

1.3.1 Misuse

Do not install/use the auger for/with:

- transferring material other than dry, free-flowing grains.
- lifting or using as a hoist or crane.

2. Safety

2.1. Safety Alert Symbol and Signal Words



This safety alert symbol indicates important safety messages in this manual. When you see this symbol, be alert to the possibility of injury or death, carefully read the message that follows, and inform others.

Signal Words: Note the use of the signal words **DANGER**, **WARNING**, **CAUTION**, and **NOTICE** with the safety messages. The appropriate signal word for each message has been selected using the definitions below as a guideline.

Indicates an imminently hazardous situation that, if not avoided, will result in serious injury or death.

⚠ WARNING

Indicates a hazardous situation that, if not avoided, could result in serious injury or death.

⚠ CAUTION

Indicates a hazardous situation that, if not avoided, may result in minor or moderate injury.

NOTICE

Indicates a potentially hazardous situation that, if not avoided, may result in property damage.

2.2. General Safety Information

Read and understand all safety instructions, safety decals, and manuals and follow them when operating or maintaining the equipment.

• Owners must give instructions and review the information initially and annually with all personnel before allowing them in the work area. Untrained users/operators expose themselves and bystanders to possible serious injury or death.



- Use for intended purposes only.
- Modification of the auger in any way without written permission from the manufacturer is not covered by the warranty.
- Follow a health and safety program for your worksite. Contact your local occupational health and safety organization for information.
- Follow applicable local codes and regulations.

2.3. Rotating Flighting Safety

A DANGER

- KEEP AWAY from rotating flighting.
- DO NOT remove or modify flighting guards, doors, or covers. Keep in good working order. Have replaced if damaged.
- DO NOT operate the auger without all guards, doors, and covers in place.
- NEVER touch the flighting. Use a stick or other tool to remove an obstruction or clean out.
- Shut off and lock out power to adjust, service, or clean.



2.4. Overhead Power Lines

A DANGER

- When operating or moving, keep auger away from overhead power lines and devices.
- The auger is not insulated.
- Electrocution can occur without direct contact.



2.5. Upending

⚠ WARNING

- Anchor intake end and/or support discharge end to prevent upending.
- Intake end must always have downward weight. Do not release until attached to tow bar or resting on ground.
- Do not raise intake end above tow bar height.
- Empty the auger and fully lower before moving.



2.6. Rotating Parts Safety

⚠ WARNING


- Keep body, hair, and clothing away from rotating shafts, pulleys, belts, chains, and sprockets.
- Do not operate with any guard removed or modified. Keep guards in good working order.
- Shut off and lock out power source before inspecting or servicing machine.



2.7. Work Area Safety

- Have another trained person nearby who can shut down the auger in case of accident.
- Do not allow any unauthorized persons in the work area.
- Keep the work area clean and free of debris.

Figure 1. Auger Work Area

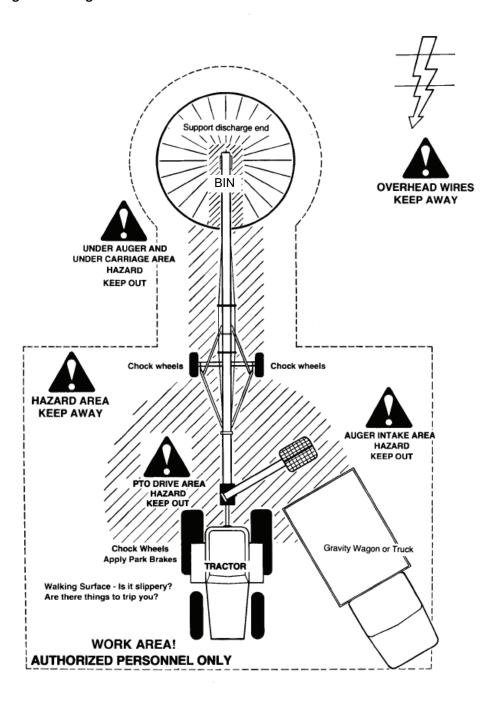

2.8. Guards Safety

⚠ WARNING

- Keep guards in place. Do not operate with guard removed.
- Do not walk on, step on, or damage guards.
- Lock out power before removing a guard.
- Ensure all guards are replaced after performing maintenance.

2.9. Raising and Lowering the Auger

- ⚠ WARNING Before raising/lowering/moving/adjusting the auger, make sure the area around the auger is clear of obstructions and/or untrained personnel. Never allow anyone to stand on or beneath the auger when it is being placed.
 - Lower the auger to its lowest position when not in use.
 - Empty the auger before raising or lowering.
 - Do not get on or beneath the auger when raising or lowering.
 - Raise and lower auger on reasonably level ground only.
 - Never attempt to increase height of the auger by positioning wheels on lumber, blocks, or by any other means. To do so will result in damage to auger and/or serious injury.
 - Do not raise the auger in high winds.

2.10. Hand Winch Safety



When Equipped:

- ⚠ WARNING Inspect lift cable before using. Replace if frayed or damaged. Make sure lift cable is seated. properly in cable sheaves and cable clamps are secure.
 - Tighten brake lock by turning winch handle clockwise at least two clicks after lowering the auger.
 - Raise the swing hopper fully before towing.
 - Do not lubricate winch brake discs.

2.11. Hydraulic Winch Safety

When Equipped:

- WARNING
 Keep away from rotating cable drum and winch cable. Do not touch or grab cable while winch is being operated or use hands to guide the cable.
 - Inspect cable and cable clamps before using hydraulic winch. Replace cable if frayed or damaged. Tighten cable clamps if necessary.
 - Check the cable anchor on the winch drum is tight.
 - Confirm hydraulic hoses are in good condition.
 - Do not continue to supply power to hydraulic winch after the swing hopper is fully lifted.
 - Do not disconnect hydraulic quick couplers when lines are pressurized.
 - Make sure lift cable is seated in cable pulley.
 - Always keep a minimum of 3 cable wraps on the cable drum.

2.12. Positioning the Auger

↑ WARNING

- Transport and place equipment on reasonably level ground when raising, lowering, positioning, or operating.
- Move the auger into position slowly. Do not unhitch and attempt to move by hand.
- Chock wheels after placement.

2.13. Towing the Auger

The auger is not intended for transport on public roads. If it requires transport on a public roadway, the following steps should be taken:

- Check with local authorities regarding transport on public roads. Obey all applicable laws and regulations.
 - Always travel at a safe speed, never exceeding 20 mph (32 km/h).
 - Reduce speed on rough surfaces.
 - Do not transport on slopes greater than 20°.
 - Use caution when turning corners or meeting traffic.
 - Make sure the SMV (slow moving vehicle) emblem and all the lights and reflectors that are required by local authorities are in place, are clean, and can be seen by all over-taking and oncoming traffic.
 - Always use hazard-warning flashers on tractor/towing vehicle when transporting unless prohibited by law.
 - Do not allow riders on the auger or towing vehicle during transport.
 - Attach to towing vehicle with an appropriate pin and retainer. Always attach safety chains.
 - Place the auger in the transport position before moving on roads.

2.14. Drives and Lockout Safety

Inspect the power source(s) before using and know how to shut down in an emergency. Whenever you service or adjust your equipment, make sure you shut down the power source and unplug or remove the key (as applicable) to prevent inadvertent start-up and hazardous energy release. Know the procedure(s) that applies to your equipment from the following power source(s). Ensure that all personnel are clear before turning on power to equipment.



2.14.1 PTO Driveline Safety

⚠ WARNING Drive

- · Keep body, hair, and clothing away from rotating PTO driveline.
- Make certain the driveline shields telescope and rotate freely on driveline before attaching.
- Make certain the driveline is securely attached at both ends.
- Do not operate auger unless all driveline, tractor, and equipment shields are in place and in good working order.
- Do not exceed the specified operating speed.
- Keep universal joint angles small and equal. Do not exceed maximum recommended length for PTO driveline.
- Engage tractor park brake and/or chock wheels.

Lockout

- Position all controls in neutral, shut off tractor's engine, and remove key from tractor.
- If removing key is impossible, remove PTO driveline from tractor.



2.14.2 Hydraulic Power Safety

⚠ WARNING Power Source

- Refer to the rules and regulations applicable to the power source operating the hydraulic system.
- Do not connect or disconnect hydraulic lines while system is under pressure.
- Keep all hydraulic lines away from moving parts and pinch points.
- Escaping hydraulic fluid under pressure will cause serious injury if it penetrates the skin surface (serious infection or toxic reaction can develop). See a doctor immediately if injured.
- Use metal or wood as a backstop when searching for hydraulic leaks and wear proper hand and eye protection.
- Check all hydraulic components are tight and in good condition. Replace any worn, cut, abraded, flattened, or crimped hoses.
- Clean the connections before connecting to equipment.
- Do not attempt any makeshift repairs to the hydraulic fittings or hoses with tape, clamps, or adhesive. The hydraulic system operates under extremely high pressure; such repairs will fail suddenly and create a hazardous and unsafe condition.

Lockout

 Always place all hydraulic controls in neutral and relieve system pressure before disconnecting or working on hydraulic system.



2.15. Tire Safety



Failure to follow proper procedures when mounting a tire on a wheel or rim can produce an explosion that may result in serious injury or death.



- DO NOT attempt to mount a tire unless you have the proper equipment and experience to do the job.
- Have a qualified tire dealer or repair service perform required tire maintenance.
- When replacing worn tires, make sure they meet the original tire specifications. Never undersize the replacement tire.
- DO NOT weld to the tire rim with the tire mounted on the rim. This action may cause an explosion which could result in serious injury or death.
- Inflate tires to the manufacturer's recommended pressure.
- Tires should not be operated at speeds higher than their rated speed.
- Keep wheel lug nuts tightened to manufacturer's recommendations.
- Never reinflate a tire that has been run flat or seriously under-inflated without removing the tire from the wheel.
 Have the tire and wheel closely inspected for damage before remounting.



2.16. Personal Protective Equipment

The following Personal Protective Equipment (PPE) should be worn when operating or maintaining the equipment.

Safety Glasses

Wear safety glasses at all times to protect eyes from debris.



Coveralls

Wear coveralls to protect skin.



Hard Hat

Wear a hard hat to help protect your head.



Steel-Toe Boots

• Wear steel-toe boots to protect feet from falling debris.



Work Gloves

• Wear work gloves to protect your hands from sharp and rough edges.



Dust Mask

• Wear a dust mask to prevent breathing potentially harmful dust.



Hearing Protection

• Wear ear protection to prevent hearing damage.



2.17. Safety Equipment

The following safety equipment should be kept on site.

Fire Extinguisher

 Provide a fire extinguisher for use in case of an accident. Store in a highly visible and accessible place.



First-Aid Kit

 Have a properly-stocked first-aid kit available for use should the need arise, and know how to use it.



2.18. Safety Decals


- Keep safety decals clean and legible at all times.
- Replace safety decals that are missing or have become illegible. See decal location figures that follow.
- Replaced parts must display the same decal(s) as the original part.
- Replacement safety decals are available free of charge from your distributor, dealer, or factory as applicable.

2.18.1 Decal Installation/Replacement


- 1. Decal area must be clean and dry, with a temperature above 50°F (10°C).
- 2. Decide on the exact position before you remove the backing paper.
- 3. Align the decal over the specified area and carefully press the small portion with the exposed sticky backing in place.
- 4. Slowly peel back the remaining paper and carefully smooth the remaining portion of the decal in place.
- 5. Small air pockets can be pierced with a pin and smoothed out using the decal backing paper.

2.18.2 Safety Decal Locations and Details


Replicas of the safety decals that are attached to the auger and their messages are shown in the figure(s) that follow. Safe operation and use of the auger requires that you familiarize yourself with the various safety decals and the areas or particular functions that the decals apply to, as well as the safety precautions that must be taken to avoid serious injury, death, or damage.

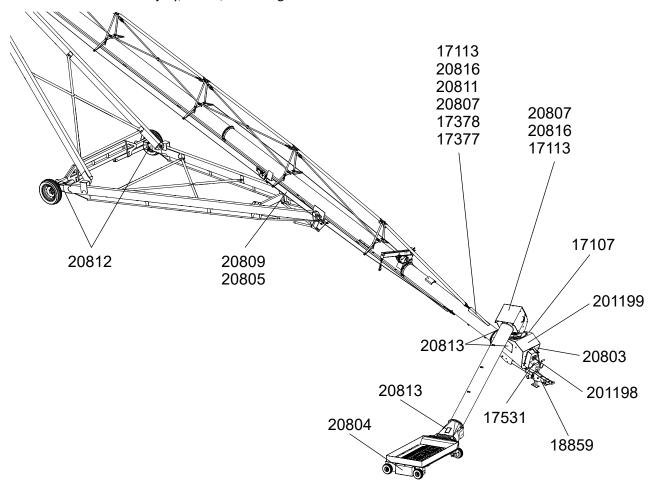


X-Tend Safety Decals (Option Kit)

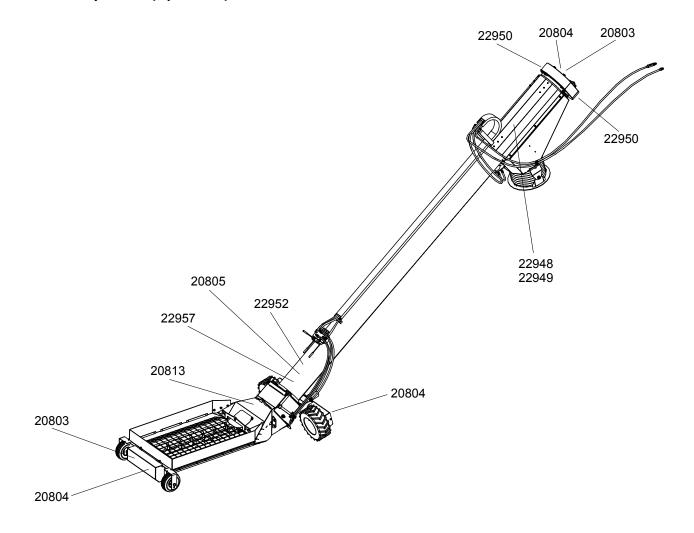


Hydraulic Landing Gear Power Swing Safety Decals (Option Kit)

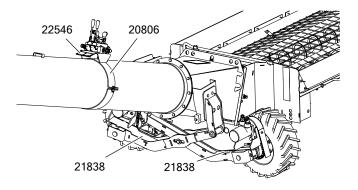


Electric Landing Gear Power Swing Safety Decals (Option Kit)

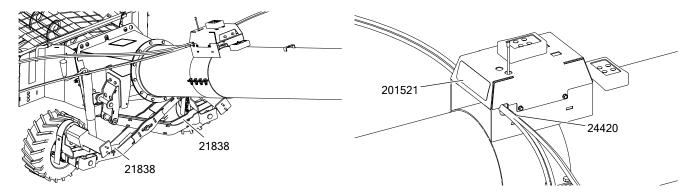


Speed Reducer Safety Decals (Option Kit)

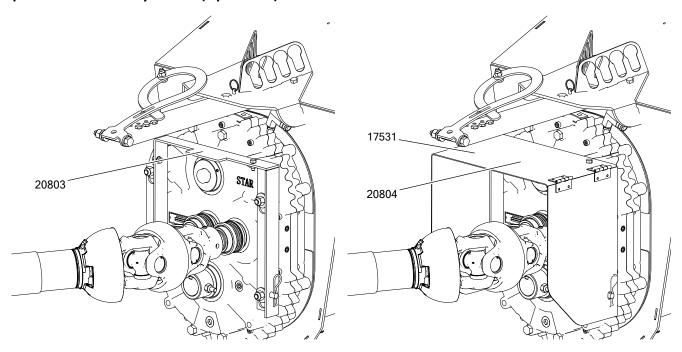


Hydraulic Winch Safety Decals (Option Kit)

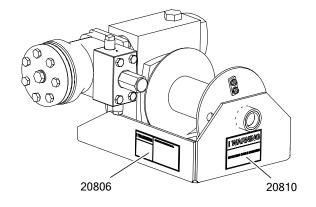

Reverser Safety Decals (Option Kit)

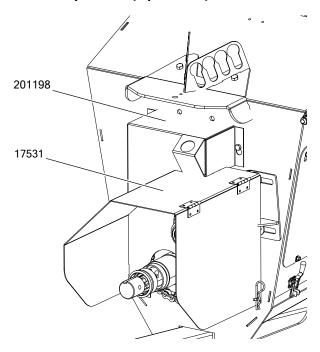

Right Angle Drive Kit Safety Decals (Option Kit)

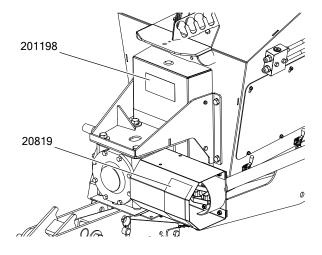

RR Right Angle Drive Kit Safety Decals (Option Kit)

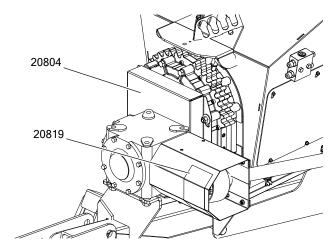


Table 1. Safety Decals

Part Number	Description
20813	DANGER
	ROTATING FLIGHTING HAZARD
	To prevent death or serious injury:
	KEEP AWAY from rotating auger flighting.
	DO NOT remove or modify auger flighting guards, doors, or covers. Keep in good working order. Have replaced if damaged.
	DO NOT operate the auger without all guards, doors, and covers in place.
	NEVER touch the auger flighting. Use a stick or other tool to remove an obstruction or clean out.
	Shut off and lock out power to adjust, service, or clean.

Table 1 Safety Decals (continued)

Part Number	Description	
20816	A DANGER	
	ELECTROCUTION HAZARD	
	To prevent death or serious injury:	
	When operating or moving, keep equipment away from overhead power lines and devices.	
	Fully lower equipment before moving.	
	This equipment is not insulated.	
	Electrocution can occur without direct contact.	

Table 1 Safety Decals (continued)

Part Number	Description
20819	ROTATING PTO DRIVELINE To prevent serious injury or death: • Keep body, hair, and clothing away from rotating PTO driveline. • Do not operate equipment unless all driveline, tractor, and equipment shields are in place and in good working order. • Make certain the driveline shields turn freely on driveline. • Make certain the driveline is securely attached at both ends. • Do not exceed specified operating speed (see operator's manual). • Keep u-joint angles small and equal. Do not exceed maximum recommended length for PTO driveline.
201199 17113	ROTATING PTO DRIVELINE To prevent serious injury or death;
	TRANSPORT HAZARD To prevent serious injury or death: • Securely attach equipment to vehicle with correct pin and safety chains. • Use a tow vehicle to move equipment.

Table 1 Safety Decals (continued)

Part Number	Description
20803	<u> </u>
	MISSING GUARD HAZARD To prevent serious injury or death, shut off power and reattach guard before operating machine.
20804	⚠ WARNING
	ENTANGLEMENT HAZARD
	To prevent serious injury or death:
	 Keep body, hair, and clothing away from rotating pulleys, belts, chains, and sprockets.
	 Do not operate with any guard removed or modified. Keep guards in good working order.
	Shut off and lock out power source before inspecting or servicing machine.

Table 1 Safety Decals (continued)

Part Number	Description	
20805	WARNING	
	HIGH PRESSURE FLUID HAZARD Hydraulic fluid can cause serious injury if it penetrates the skin. If it does, see a doctor immediately. • Relieve system pressure before repairing, adjusting or disconnecting. • Wear proper hand and eye protection when searching for leaks. Use wood or cardboard instead of hands.	
20806	WARNING HIGH PRESSURE FLUID HAZARD Hydraulic fluid can cause serious injury if it penetrates the skin. If it does, see a doctor immediately. Relieve system pressure before repairing, adjusting or disconnecting. Wear proper hand and eye protection when searching for leaks. Use wood or cardboard instead of hands.	

Table 1 Safety Decals (continued)

Part Number	Description
20807	⚠ WARNING
	To prevent serious injury or death:
	Read and understand the manual before assembling, operating, or maintaining the equipment.
	Only trained personnel may assemble, operate, or maintain the equipment.
	Children and untrained personnel must be kept outside of the work area.
	Do not modify the equipment. Keep in good working order.
	If the manual, guards, or decals are missing or damaged, contact factory or representative for free replacements.
	Lock out power before performing maintenance.
	To prevent equipment collapse or upending, support equipment tube while disassembling certain components.
	Follow grain storage structure manufacturer's warnings when loading and unloading.
	Electric motors must be grounded. Disconnect power before resetting overloads.
20809	To prevent serious injury or death: • Keep away from rotating cable sheaves and lift cables. • Inspect lift cable periodically; replace if damaged. • Inspect cable clamps periodically; tighten if necessary.

Table 1 Safety Decals (continued)

Part Number	Description	
20810	To prevent death or serious injury: • Keep away from rotating cable drum and winch cable. • Inspect lift cable periodically; replace if damaged. • Inspect cable clamps periodically; tighten if necessary.	
20811	WARNING UPENDING HAZARD	
	 To prevent death or serious injury: Anchor intake end and/or support discharge end to prevent upending. 	
	 Intake end must always have downward weight. Do not release until attached to tow bar or resting on ground. Do not raise intake end above tow bar height. Empty tube and fully lower before moving. 	
20812 (84/94/114 models only)	WARNING ROLLOVER / TRANSPORT HAZARD To prevent serious injury or death: • Fully extend axles before raising tube. • Retract axles before transporting.	

Table 1 Safety Decals (continued)

Part Number	Description	
22950	<u> </u>	ARNING
	BE	Moving Parts will cause severe injury. KEEP AWAY
		ROTATING SHAFT Keep hair and loose clothing away
201198	A MADAUNIC	
	ENT. To prevent • Keep body, pulleys, bel • Do not ope modified. K • Shut off and	warning ANGLEMENT HAZARD serious injury or death: , hair, and clothing away from rotating lts, chains, and sprockets. rate with any guard removed or reep guards in good working order. d lock out power source before or servicing machine.
17107	To prevent personal in	njury or
	damage to equipment in lift cylinder hydrauli raising equipment into	ic line after

Table 1 Safety Decals (continued)

Part Number	Description	
21838	CAUTION	
22957	 CAUTION SHUT OFF PTO when retracting or extending swing to or from its fully retracted position. Engaging spline shaft with PTO running will damage the machine. Make certain everyone is clear of the equipment before applying power or moving the machine. 	
17377 (84/94/114 models only)	To lower equipment, start tractor, then engage hydraulic lever in down position. This pumps oil to upper chamber of the hydraulic cylinders preventing overfill of tractor reservoir.	


Table 1 Safety Decals (continued)

Part Number	Description	
17378 (84/94/114 models only)	NOTICE	
	This equipment is not intended for transport on public roads. If it must be moved, check local regulations. To avoid damaging the equipment: Be careful when turning corners. Watch for low overhead objects. Retract axles before transporting unit.	
17531	NOTICE	
	To prevent damage during auger-to-tractor hookup: • Follow dimensions above for correct auger-to-tractor hookup. • Auger must be on level ground and in full down position when measuring. • Adjust drawbar as needed. See operation manual for complete details.	

Table 1 Safety Decals (continued)


Part Number	Description	
18859	Disconnect PTO driveline from tractor before moving equipment. If attached, driveline will bottom out, severely damaging the CV u-joint and lower flight shaft. See manual for maintenance.	
22948	NOTICE DO NOT operate the PTO when retracted past this point. Failure to follow could result in equipment damage.	
22949	DO NOT operate the PTO when retracted past this point. Failure to follow could result in equipment damage.	
24420	NOTICE Connect to positive battery terminal only or system damage may result.	

Table 1 Safety Decals (continued)

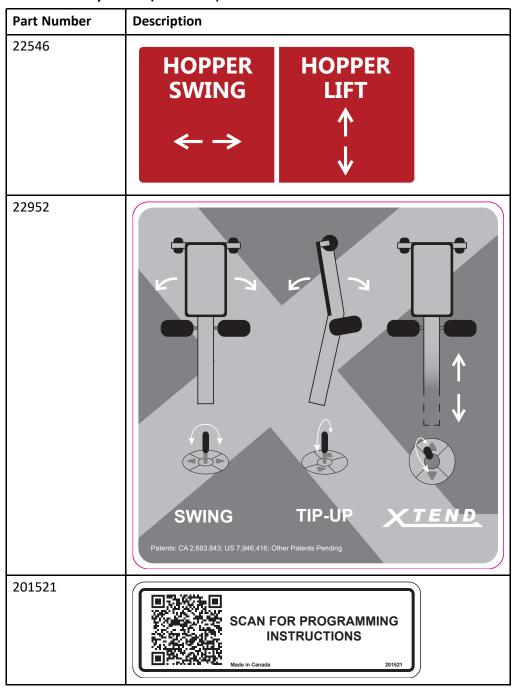


3. Features

64/74 Model Features

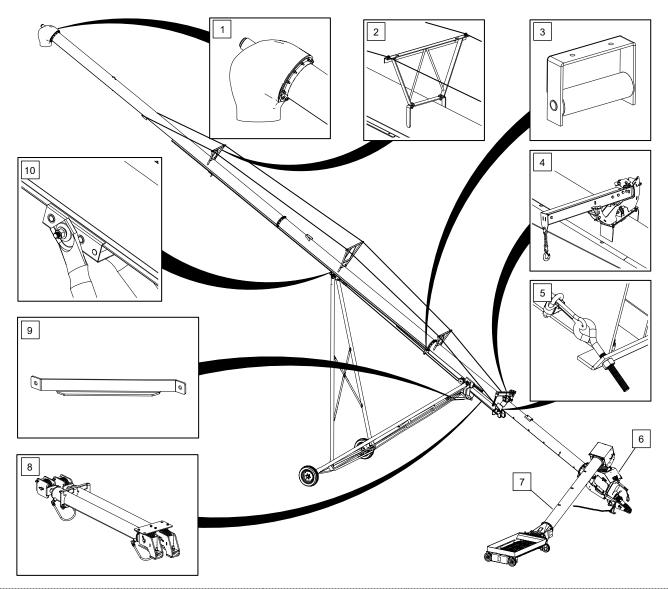


1	discharge spout	6	boot
2	truss tower	7	swing
3	cable roller	8	hydraulic cylinders
4	lift arm	9	stabilizer brace
5	cable adjustment	10	track

84/94/114 Model Features

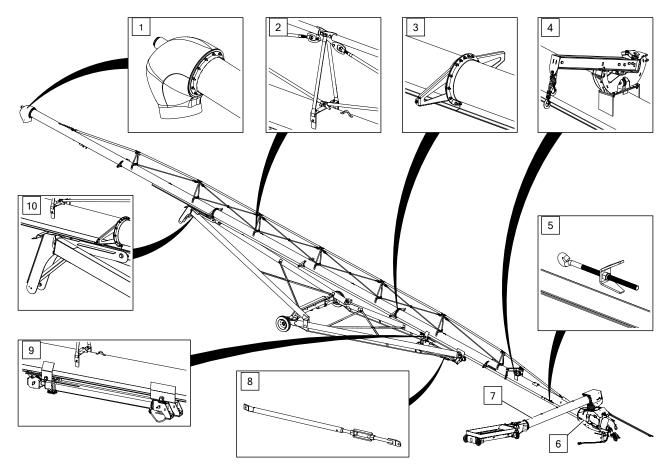


1	discharge spout	6	boot
2	truss tower	7	swing tube
3	side truss	8	adjustable stabilizer brace
4	lift arm	9	hydraulic cylinders
5	cable adjustment	10	lift-assist

Swing Features

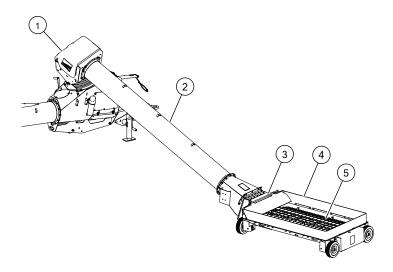


1	spout head service cover
2	swing tube
3	maintenance hatch
4	hopper
5	flights and flight guarding

Grain Transfer Boot Features

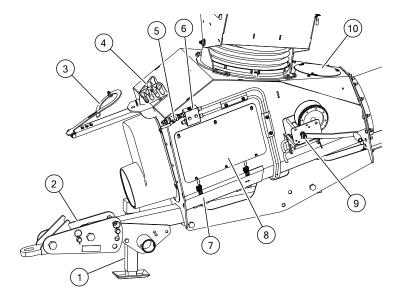

1	hitch jack
2	hitch
3	PTO holder
4	hose holder
5	ball valve
6	external check valve
7	clean-out hatch
8	side access panel
9	manual winch (hopper)
10	top access panel

X-Tend Features (Option Kit)

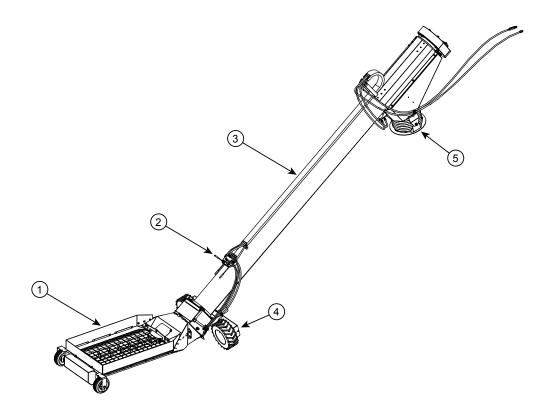

1	hopper	4	wheel drive assembly
2	positioning controls	5	swing ring
3	swing auger		

4. Transport


When transporting, follow all safety precautions and use a proper tow vehicle to help ensure safe transport of the auger.

4.1. Transport Safety

MARNING

- Check with local authorities regarding transport on public roads. Obey all applicable laws and regulations.
- Always travel at a safe speed, never exceeding 20 mph (32 km/h). Reduce speed on rough surfaces. Use caution when turning corners or meeting traffic.
- Yield to other drivers and allow faster traffic to pass.
- Make sure the SMV (slow moving vehicle) emblem, maximum transport speed sign, and all the lights and reflectors that are required by local authorities are in place, are clean, and can be seen by all over-taking and oncoming traffic. Always use hazard-warning flashers on tractor/towing vehicle when transporting unless prohibited by law.
- Do not transport during times of limited visibility such as fog, snow, or heavy rain. Take extra precautions at night and at dusk.
- Keep others away from the transport vehicle and auger.
- Do not allow riders on the auger or towing vehicle during transport.
- Stay away from overhead obstructions and power lines when operating and transporting. Electrocution can occur without direct contact.
- Fully lower the auger before transporting, and only raise when next to storage facility.
- Attach to a proper towing vehicle with a hitch pin and retainer. Always attach safety chains.
- Do not raise the intake end above drawbar, upending may occur.
- Empty auger of all grain or seed before transporting.

 Transporting a full auger will place excessive loads on the tube, frame, axle, hitch, and tow vehicle.
- Do not transport on slopes greater than 20°.
- Do not transport with an under-inflated tire(s).
- If the auger wheels are partially or fully buried in snow or grain, failure to clear area around the wheels before transporting may cause damage to the auger or result in serious injury.

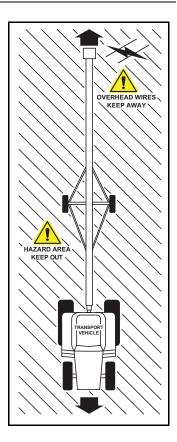

4.2. Transport Preparation

- Do not tow faster than 20 mph (32 km/h). Table 2 references the acceptable transport speed as per the
 ratio of tractor weight versus auger weight. See Specifications (Section 9. Specifications on page 103) for
 auger weights.
 - **WARNING** A weight imbalance between the auger and the towing vehicle could result in a collision from reduced stability, handling, and braking ability.
- Ensure the auger will clear any overhead obstructions or electrical wires prior to transporting. Refer to Section 9. – Specifications on page 103 for the transport height of your auger.
- Longer augers have a large turning radius. Allow ample room for turning as the discharge end may swing dramatically. Allow all oncoming traffic to pass before turning right or left.
 - **MARNING** A collision with an oncoming vehicle could occur if the auger discharge swings into the opposing lane.

Table 2. Speed versus Weight Ratio

Road Speed	Weight of auger relative to weight of tow vehicle	
Up to 20 mph (32 km/h)	1 to 1, or less than the weight of the tow vehicle	
Up to 10 mph (16 km/h)	2 to 1, or less than the weight of the tow vehicle	
Do not tow if	More than 2 to 1	

4.3. Connect the Auger to the Towing Vehicle

Follow all safety precautions when transporting the auger and use a proper towing vehicle.

- 1. Fully lower the auger.
- 2. Disconnect the PTO driveline and hydraulics (as applicable) from the tractor.
- 3. Fully retract the wheel axles (if applicable).
- 4. Place the hitch in transport position.
- 5. Connect the auger to the tow vehicle with a hitch pin. Use a hitch pin that will not allow the auger to separate from the towing vehicle.
- 6. Connect the safety chain securely, forming a cradle to prevent the auger from digging into the road surface (should a breakaway occur). Do not use the safety chain if one or more links or end fittings are stretched, broken, damaged, or deformed.


Important


Use a safety chain with a load rating at least as high as the auger weight.

- 7. Place the intake hopper into transport position.
- 8. Place the swivel jack (on side of hitch) in transport position and lock.
- 9. Use caution when transporting the auger over rolling terrain. In severe dips, the intake end may contact the ground.

Refer to Section 9. – Specifications on page 103 for auger weight and hitch pin information.

Safety Chain and Hitch Connection

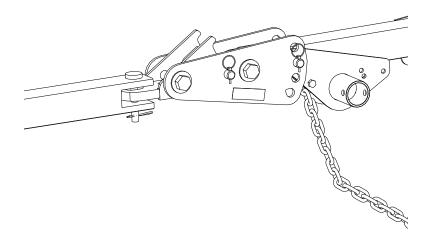

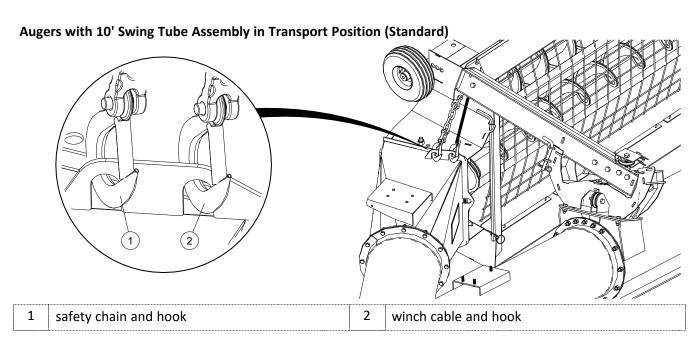

1 safety chain and hook 2 winch cable and hook

Augers with 15' Swing Tube Assembly in Transport Position (Optional)

4.4. Position the X-Tend for Transport

- 1. Fully extend the X-Tend tube.
- 2. Make the hopper as flat as possible to avoid interference with the frame before lifting the hopper into transport, as shown in Figure 2 on page 41.
- 3. Attach the winch cable to the hopper, lift into position, and secure the safety chain, as shown in Figure 4 on page 42.

Note

The 74 model connects to the hopper in a different position than the other models.

Figure 2. Flatten the X-Tend Hopper

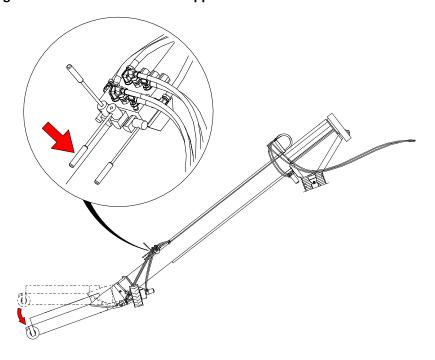


Figure 3. Attach the Cable


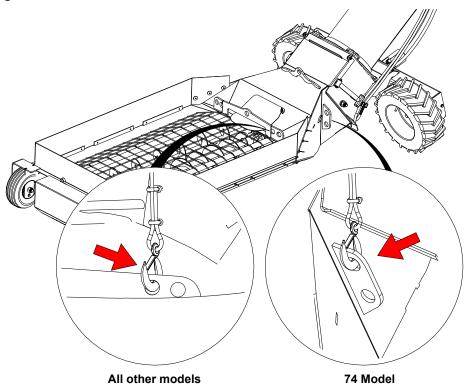



Figure 4. Transport Position and Chain Attach

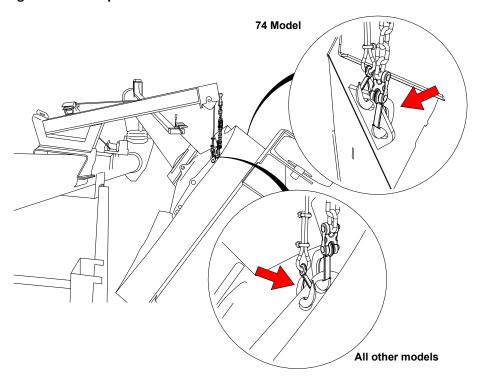

4.5. Auger Steer Transport Position

- 1. Fully retract the steer axle assemblies. See Section 5.4 Extendable Axle Positioning with an Auger Steer Kit on page 48.
- 2. Lock the steer axle assemblies using the steer axle lock pins.

WARNING Failure to lock the steer axle assemblies can cause the auger to steer to one side during transport, potentially causing an accident.

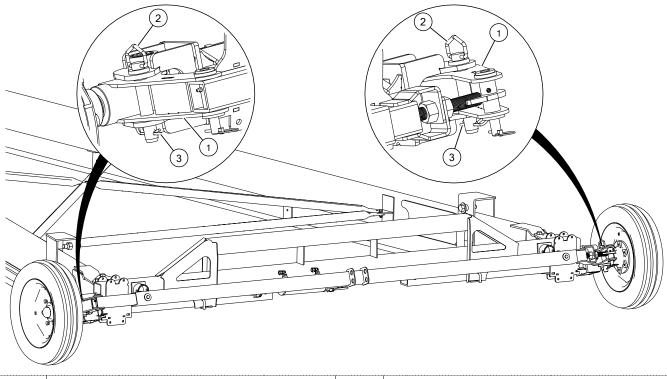

1	steer axle assembly	3	hairpin
2	steer axle lock pin		

5. Placement

5.1. Placement Safety

- MARNING The auger is not insulated, keep away from overhead power lines. Electrocution can occur without direct contact.
 - Anchor intake end before using.
 - Place the auger on reasonably level ground before operating. The auger could topple if ground is too uneven.
 - Chock the auger wheels after placement.
 - Empty the auger before raising, lowering, or positioning.
 - Check that wheels are free to move before raising or lowering the auger.
 - Never attempt to increase height of the auger by positioning wheels on lumber, blocks, or by any other means.
 - Do not permit anyone to stand beneath the auger when raising or lowering.
 - Move the auger into position slowly. Do not unhitch and attempt to move by hand.
 - Do not leave auger in raised position when not in use.

5.2. Positioning the Auger

Filling Bins

The auger is designed to be transported and operated without unhitching unit from tractor.

1. Disconnect the PTO driveline from the tractor and secure it in the transport saddle.



Failure to disconnect from the tractor will damage the PTO driveline.

2. Ensure that the tractor and auger are securely hitched together.

Important

Use a type of hitch pin (see Auger / Tractor Hookup section) that will not allow the auger to separate from towing vehicle.

- 3. Disconnect the safety chain from the intake hopper.
- 4. Before connecting the hydraulics, ensure that the quick-connect coupler on the auger and tractor is clean and free of dirt by wiping with a cloth.


MARNING Dirt in the hydraulic system can damage the cylinder o-rings, causing leakage and the possible failure of the system and personal injury.

- 5. Connect hydraulic hoses, ensure connections are tight. Check for leaks, binding, flattening, kinks, or wear.
- 6. Where Equipped: Fully extend wheel axles, see Extendable Axle Positioning.
- 7. Adjust the hitch to the operating position, refer to Hitch Adjustment.
- 8. Ensure the jack is in storage position.
- 9. Raise the main auger tube as required, see Raising and Lowering.

31175 R3 44

- 10. Move the auger into working position slowly. Do not unhitch and attempt to move the auger by hand.
- 11. Back the auger up to the storage facility while it is in its lowered configuration.
- 12. Raise the auger so it clears the storage facility. See Raising and Lowering.
- 13. Slowly back the auger up until the outlet is over the opening in the storage facility.
- 14. Slowly lower the auger to the bin.
- 15. Set the park brake on the tractor before dismounting, or chock its wheels.
- 16. Once the auger is in position, chock its wheels.
- 17. Lower the intake hopper to the ground, see Raising and Lowering the Intake Hopper.
- 18. See Operation for correct operating procedures.

Figure 5. Auger Placement (Direct PTO Drive)

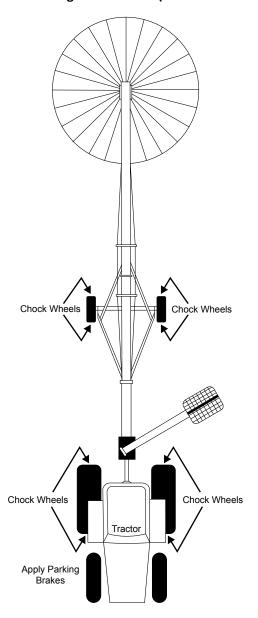

5.2.1 Raising and Lowering the Auger


The intake hopper must be off the ground when raising and lowering the auger.

Before using the hydraulic lift cylinder:

- The hydraulic cylinders are shipped without oil and must be charged with oil before operating the first time.
 See the Appendix section for charging instructions.
- Check that the hydraulic hoses are free from leaks, binding, flattening, kinks, or wear.

Raising

1. Before connecting the hydraulic hose, wipe the hose coupler clean.

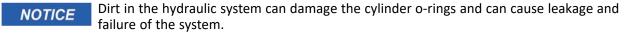

- 2. Connect the hydraulic hoses, ensure the connections are tight. Visually check for leaks, binding, flattening, kinks, or wear.
- 3. Open the ball valve on the hose connected to the cylinder.
- 4. Start tractor and idle at low rpm.
- 5. Engage hydraulic lever to power the cylinder.
- 6. Increase tractor rpm until desired rate of lift is reached.
- 7. Raise the auger to the desired height.
- 8. Close the hydraulic ball valve when the auger is fully raised.
 - **NOTICE** Failure to close the ball valve may cause the frame to creep lower, potentially damaging the auger.

Lowering:

1. Reconnect the hydraulic hose coupler to tractor, if disconnected. Keep the tractor running while lowering the auger should the need arise to re-lift it.



Some augers are equipped with dual acting hydraulic cylinders, for these units the tractor must be running to pump oil to the upper chamber of the hydraulic cylinder(s) to prevent overfilling of the tractor reservoir.

- 2. Open the ball valve.
- 3. Open the tractor valve, feathering the control to prevent too rapid a descent.

Note

Once the valves are opened, the auger tube lowers by gravity. As the tube nears the full down position, the rate of descent will increase. Do not operate with the tractor valve fully open.

- 4. Turn off the tractor, and lock out the tractor power source.
- 5. Before disconnecting hydraulic couplers, relieve the hydraulic pressure.
 - **WARNING** Disconnecting a hydraulic hose under pressure can result in serious injury.
- 6. Adjust the auger in the full down position until there is a slight tension on the lift cable. Do not leave the cable slack.

5.3. Extendable Axle Positioning

When equipped:

Important


Do not raise the auger unless the axles are in the extended position.

Do not transport the auger unless the axles are in the retracted position.

MARNING Rollover can occur if axles are not extended before raising the auger.

- 1. Ensure the auger is on level ground before attempting to extend or retract the axles. **The auger must be** attached to tractor at all times.
- 2. Using the jack supplied, insert it into one of the jack stubs located on one end of the axle. Jack must be secured to jack stub using pin (attached to jack).
- 3. Raise one side at a time. Raise until the tire clears the ground.
- 4. Remove the axle pin from the axle and position the axle as desired until the holes line up. Reinsert the axle pin and secure with hairpin. Lower the jack.
- 5. Repeat the process on the opposite side of the axle.

Figure 6. Typical Extendable Axle

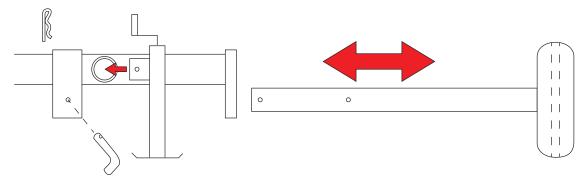

5.4. Extendable Axle Positioning with an Auger Steer Kit

 \Rightarrow

When equipped:


Important

Do not transport the auger unless the axles are in the retracted position.

Do not raise the auger unless the axles are in the extended position.


MARNING Rollover can occur if axles are not extended before raising the auger.

- 1. Ensure the auger is on level ground before attempting to extend or retract the axles. **The auger must be** attached to tractor at all times.
- 2. Disconnect the cylinder from the steer axle.
- 3. Disconnect one end of the steer axle from the steer axle assembly.
- 4. Pivot the steer axle away from the auger axle.

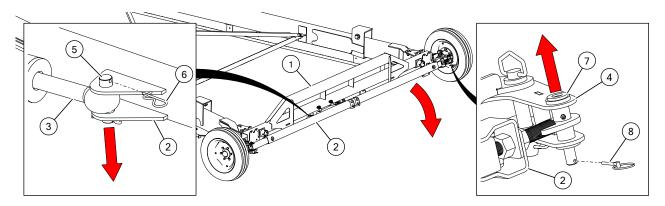


1	auger axle	5	pin, 1" x 3-3/4"
2	steer axle	6	grip clip
3	cylinder	7	pin
4	steer axle assembly	8	lynch pin

- 5. Using the jack supplied, insert it into one of the jack stubs located on one end of the axle. The jack must be secured to a jack stub using the pin (attached to the jack).
- 6. Raise one side at a time. Raise until the tire lifts off the ground.
- 7. Remove the pin that is holding the steer axle assembly to the auger axle.
- 8. Position the steer axle assembly as desired until the holes line up.
- 9. Secure the steer axle assembly to the auger axle using the existing pin.
- 10. Lower the jack.
- 11. Repeat the process on the opposite side of the auger axle.
- 12. Remove the jack.

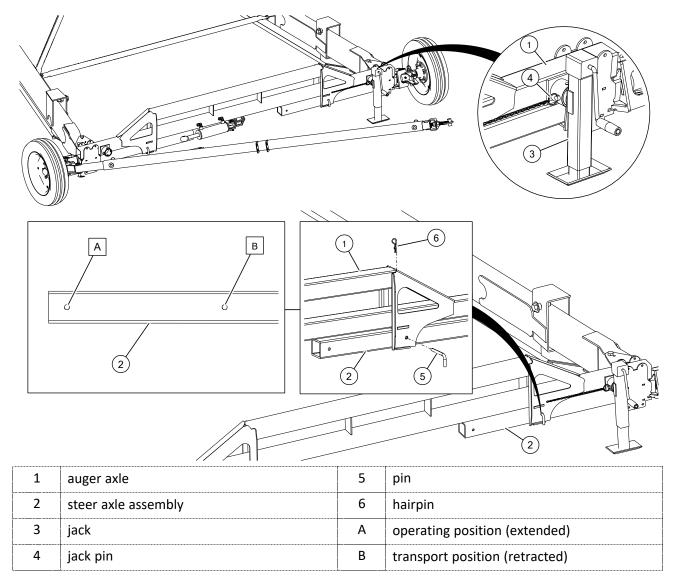

- 13. Remove the pins that are holding the steer axle links to the steer axle center.
- 14. Position the steer axle links as desired until the holes line up.
- 15. Secure the steer axle links to the steer axle center using the existing pins.

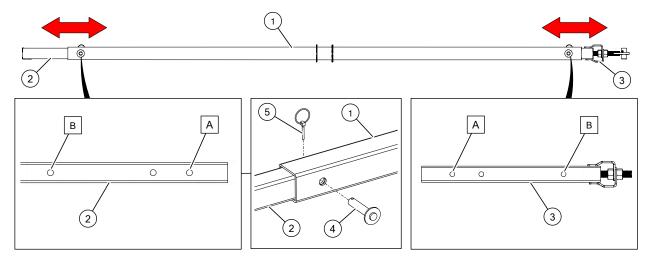

1	steer axle center	5	lynch pin
2	steer axle link	Α	operating position (extended)
3	steer axle end link	В	transport position (retracted)
4	pin		

- 16. Pivot the steer axle towards the auger axle.
- 17. Re-install the steer axle to the steer axle assembly.
- 18. Re-install the cylinder to the steer axle.

5.5. Hitch Adjustment

1. Using the jack to support the boot and take pressure off of the hitch, place hitch in transport position by moving the hitch pin to the second adjustment hole from the top Figure 7.

Figure 7. Hitch in Transport Position




Note

Bottom three holes are used for transport.

2. Using the jack to support the boot and take pressure off of the hitch, place hitch in operating position by moving the hitch pin to the top adjustment hole Figure 8.

Figure 8. Hitch in Operating Position (Typical)

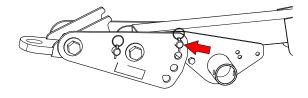

Note


The second hole is used for piling applications or when auger is near transport position.

5.6. Auger-to-Tractor Hookup

The auger must be correctly connected to the tractor for all operations, including transport, raising, placement, and augering grain.

When attaching the auger to your tractor, the only suitable hitch is a clevis-type hitch that is appropriately sized and rated for towing the auger. Always use a proper hitch pin that is rated for the load and application, and ensure that the hitch pin is secured with a suitable hairpin.

Hitching the Auger to a Tractor

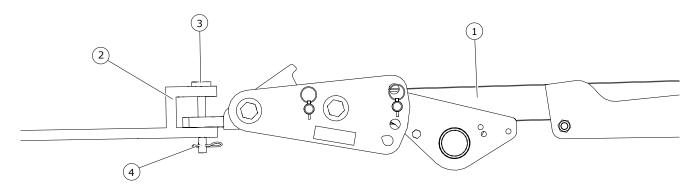


1	auger hitch	3	hitch pin
2	tractor clevis hitch	4	hairpin

Measurements Between Drawbar and Driveline

Since the auger and tractor become an integral unit during transport, placement, and operation, the configuration and measurements between the tractor drawbar and the tractor PTO driveline are very important.

The figure below illustrates the ideal measurements. Most tractors fall into this range.

- Dimension (B) may range from 6" (15.2 cm) to 10" (25.4 cm) with 8" (20.3 cm) being ideal.
- If dimensions (A) and (B) on your tractor are as shown, then dimension (C), which is critical, will be correct.
- If (A) and (B) vary on your tractor from the recommended dimensions, consult the table below for potential problems and their solutions.

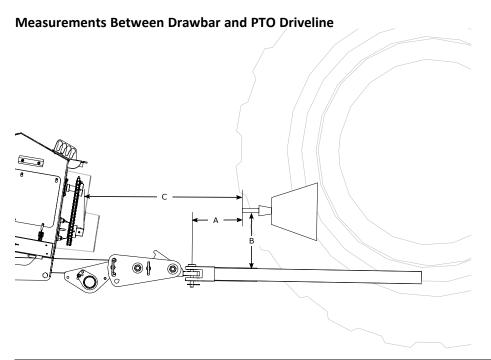

А	14" (35.6 cm)
В	6"-10" (15.2 cm-25.4 cm)
С	41" (104.14 cm)

Note


Measurements must be taken with auger on level ground and in full down position. Raise tractor drawbar if necessary to maintain (B) dimension of 6"-10" (15.2 cm-25.4 cm)

Measurement	Problem	Solution
If (A) is less than 14" (35.6 cm) (C) will be less than the recommended 41" (104.1 cm).	The PTO driveline will bottom out when auger is in raised position, causing damage to the PTO driveline, the bearing, or the boot housing.	Pull out or lengthen the tractor drawbar as needed to make (C) 41" (104.1 cm) when the auger is in full down position.
If (A) is more than 14" (35.6 cm) (C) may be more than the recommended 41" (104.1 cm).	The PTO driveline will separate from the auger in the lowered position, causing damage to equipment and/or injury to personnel.	Shorten distance (C) to the recommended 41" (104.1 cm) by attaching hitch to tractor drawbar at a point closer to the tractor PTO shaft.
If (B) is more than 10" (25.4 cm) (C) (between tractor PTO shaft and auger input shaft) shortens more quickly when auger is being raised.	The u-joint angle on the PTO driveline will be too severe in the raised position, causing the PTO driveline to bottom out before auger is fully raised. This will cause damage to the PTO driveline, flight shaft, bearing, and boot.	Raise the tractor drawbar until dimension (B) is within the recommended 6" to 10" (15.2 cm–25.4 cm).

5.7. Raising and Lowering the Intake Hopper

This section applies to the low-profile intake hopper. For specific X-Tend information, see Section 4.4 – Position the X-Tend for Transport on page 41.


- 1. Attach the winch cable hook to the appropriate hopper lifting point.
- 2. Fully raise the hopper with intake side facing towards the main auger tube.
- 3. Secure the hopper with the safety chain and hook.

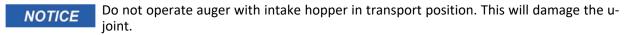


Important

The hopper intake must face the main auger when in transport.


- 4. Ensure swing-away is empty before raising or lowering.
- 5. Do not permit anyone to stand near the swing-away when raising or lowering.

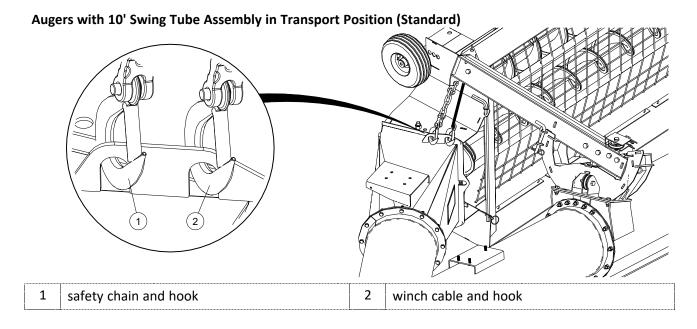

Augers with 15' Swing Tube Assembly in Transport Position (Optional)

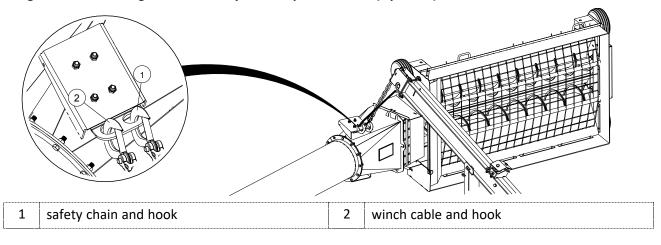

5.7.1 Swing-Away Hydraulic Winch Operation

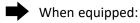

1. Before connecting hoses, wipe couplers clean.

NOTICE Dirt in the hydraulic system can damage the winch motor and can cause failure of the system.

- Connect hydraulic hoses, ensure connections are tight. Visually check for leaks, binding, flattening, kinks, or wear.
- 3. Check that cable anchor on winch drum is tight, cable clamps are secure, lift cable is seated in cable pulley, and inspect cable before operating. If damaged, replace immediately.
- 4. Always keep a minimum of 3 cable wraps on the drum with the swing-away hopper fully lowered.
- 5. Start tractor and idle at low rpm. Engage hydraulic lever to power winch. Test the direction of rotation of winch to ensure drum is moving in the direction required. Increase tractor rpm until desired rate of lift or descent is reached.
- 6. Do not touch, grab, or guide cable while equipment is being raised or lowered.



Do not continue to supply power to winch when swing-away is fully up. Damage to equipment and/or personal injury could result.

5.8. Grain Hopper Positioning

This section applies to the low-profile grain hopper. To position the X-Tend, see Section 6.2 – X-Tend Operator Controls on page 60.

The low-profile grain hopper is designed to be rolled into position to receive grain for transfer through the boot to the auger discharge spout. Ground clearance can be adjusted by raising or lowering the position of the hopper wheel axles.

The grain hopper must be lifted and secured for transport using the hopper lift arm, hydraulic winch, and safety chain and hook. The hopper lift arm can be reconfigured for lifting on either side of the auger.

5.8.1 Electric Power Swing Operation




The electric power swing is an optional component.

Remote transmitters are pre-programmed from the factory—to reprogram your remote (or to add additional remotes), please see the Appendix.

You can register more than one remote transmitter to a single power swing. However, it is not recommended to register one remote transmitter to multiple power swings.

Figure 9. Electrical Cables

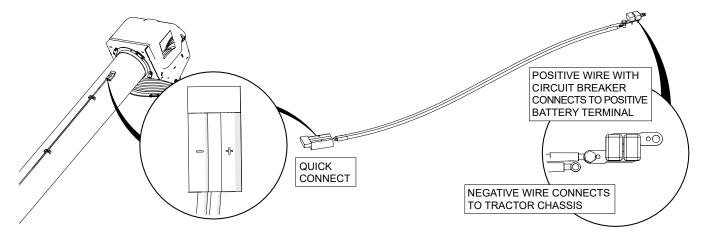


- 1. Connect the end opposite the quick-connect to the battery and chassis ground using the 5/16" lugged connectors supplied with the kit:
 - a. Attach the positive wire directly to the positive terminal on the tractor battery (the positive wire has a circuit breaker on it).
 - b. Attach the negative wire to a tractor chassis ground point (assuming that the tractor battery is also grounded to the chassis).

NOTICE If these electrical cables are not hooked up properly the electric controller will be damaged.

- 2. Attach the receiver cable quick connect to the tractor wire harness quick connect.
- 3. On the high end of the power swing remote receiver box, flip the power switch to the ON position.

Figure 10. Power Swing Receiver Box

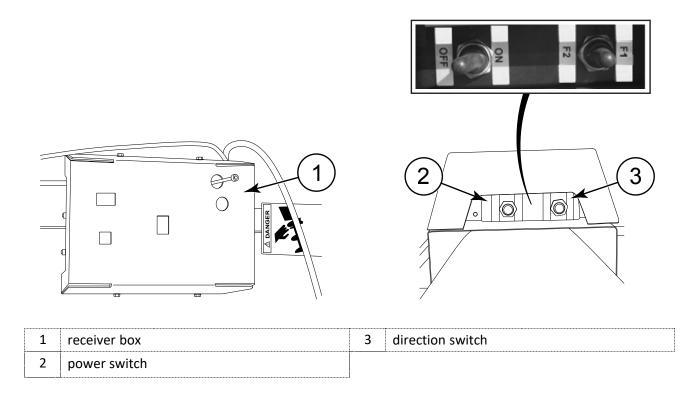

For Receiver Box Operation:

- 1. Using the direction switch, move the switch in the desired direction of travel (either F1 or F2).
- 2. Once finished moving the hopper, release the switch to stop operation (it should return to the neutral position).

Figure 11. **Power Swing Remote Transmitter**



Red "Off" button

Hopper direction controls

For Remote Transmitter Operation:

- 1. Push the green button (no symbol) to turn the remote ON (Figure 11).
- 2. Push the yellow directional buttons (marked with arrows) located below the ON/OFF buttons in the direction you want the hopper to move (Figure 11).
- 3. If this does not work:
 - a. Push the red button (with an exclamation mark) to turn the remote OFF.
 - b. Then push the green button (no symbol) to turn the remote back ON.
- 4. Operate the remote as outlined above, using the two yellow directional buttons (marked with arrows) located at the bottom of the remote to move the hopper as desired.

5.8.2 Hydraulic Power Swing Operation




- 1. Ensure that the valve is in the proper configuration (open-center or closed center). Refer to Section 10.4 Open/Closed-Center Valve Conversion on page 108.
- 2. Adjust the tractor's output flow using the flow control lever to achieve 4-5 gpm. This will ensure a controlled speed.
- 3. Put the lever that controls your tractor hydraulics in the detent position where the hydraulics stay engaged all the time.
- 4. In order to activate the power swing:
 - a. Push the right side control lever on the power swing valve control assembly to raise the hopper.
 - b. Use the left side control lever to move the hopper in the desired direction of travel.
 - c. Once finished moving the hopper to the desired position, use the right side control lever to lower the hopper.

31175 R3 56


Figure 12. Control Valve Lever Functions



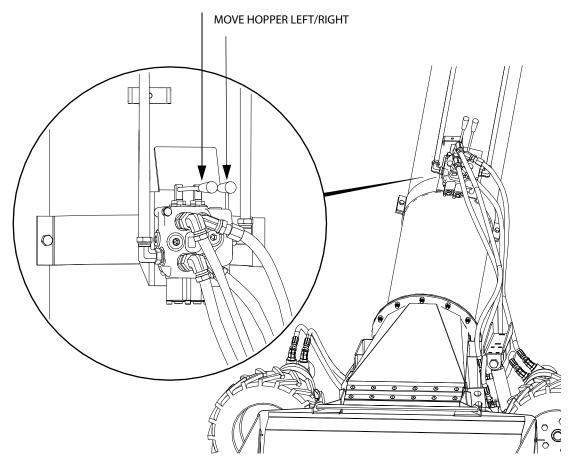

5.9. Positioning the Tractor for Right Angle Drive Operation

Before setting up for right angle drive operation, the auger must first be positioned at the bin with a tractor with the auger wheels securely chocked, and the ball valve for lifting must be closed.

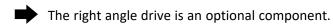

- 1. Position hitch jack with a board underneath, then raise the auger hitch slightly.
- 2. Relieve pressure in the hydraulic hose, then disconnect from tractor and place in the auger's hose rack.
- 3. Remove the safety chain and hitch pin, then move the tractor.
- 4. Attach the support leg as shown in Figure 14.
- 5. Place a board under the support leg if needed, then lower the hitch jack until the auger's intake weight is supported with the support leg. Place the hitch jack into the transport position. See Figure 14.
- 6. Position the tractor at a right angle to the auger intake; apply the parking brake, and chock the tractor wheels.
- 7. Securely connect the non-separable PTO driveline to the tractor. Make sure all guards and master guards are in place.

8. Do not exceed the maximum PTO operating length of 80" (2.03 m) or a maximum angularity of 15° from the ideal 90° drive angle.

Figure 13. Tractor Position for Right Angle PTO Drive (Left Side Drive Configuration)



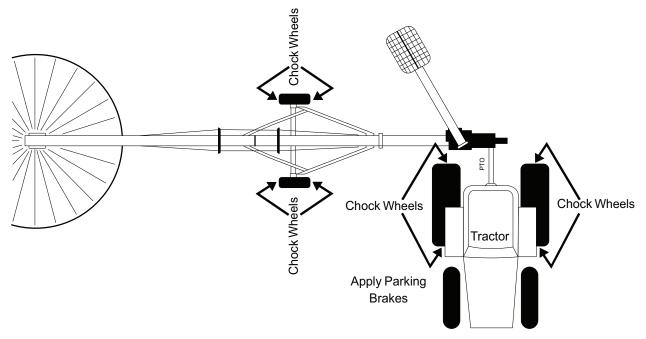


Figure 14. Right Angle Drive Support Leg (Working Position)

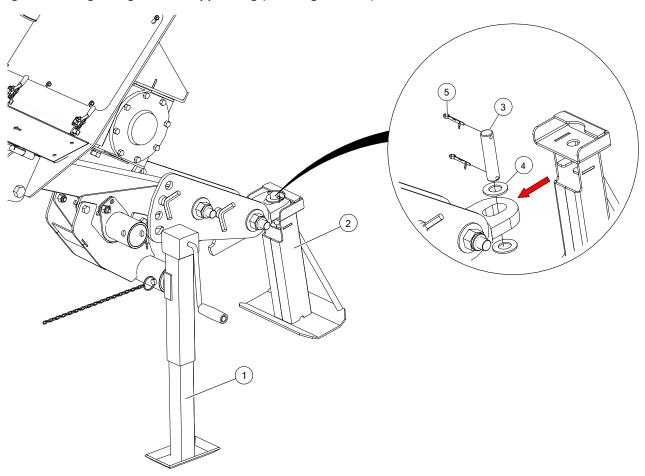

1	jack	4	flat washer, 1"
2	support leg	5	cotter pin, 1/4" x 1-3/4"
3	pin		

Figure 15. Right Angle Drive Support Leg (Storage Position)

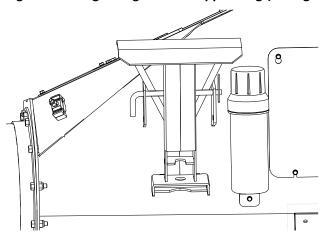

6. Operation

This section provides important safety precautions and instructions for optimal operation. Follow all guidelines carefully to ensure safe and efficient use.

6.1. Operation Safety

- and bearings.
 - Do not enter the grain bin or truck while the auger is operating.
 - Always operate with guards, covers, and shields in place.
 - Have another trained person nearby who can shut down the equipment in case of accident.
 - Keep the work area clear of bystanders.
 - Keep the work area clean and free of debris.
 - Ensure maintenance has been performed and is up to date.



Refer to your bin operation manual for specific operating and safety information for your bin.

6.2. X-Tend Operator Controls

Refer to Figure 16 on page 61 for the operator controls.


The X-Tend adds two functions to a normal swing auger:

- 1. The ability to extend and retract the hopper.
- 2. The ability to tilt the end of the hopper up or down.

All controls for these functions are located on the swing tube where the operator has easy access to the handles on the trailer for opening the chute gates. The functions are identified on the operating label shown below.

60 31175 R3

Figure 16. X-Tend Operator Controls

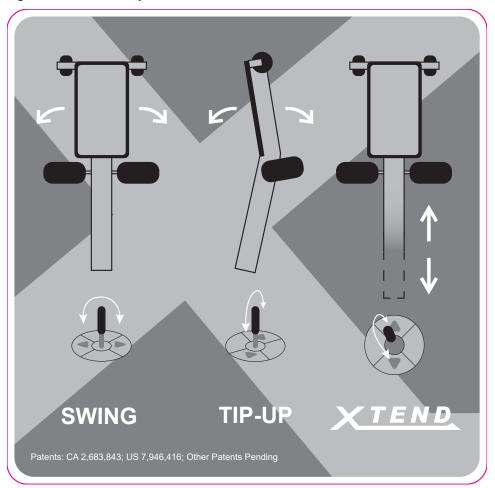

6.3. Start-up and Break-in

Check the following during the first hours of operation.

- 1. Check that the auger intake and discharge areas are free of obstructions.
- NOTICE Foreign objects can damage the auger. Remove any obstructions from the intake and discharge areas before operating the auger.
- 2. Visually inspect the auger, see Visual Inspection in Maintenance Section.
- 3. Check tightness of all bolts/nuts, fasteners, and hardware (re-torque if necessary).
- 4. Lubricate all grease fittings and oil chains.
- 5. Check drive chain tension and alignment.
- 6. Ensure adequate power is supplied to operate the auger, see Section 9. Specifications on page 103.
- 7. Start the tractor and idle at low rpm. Slowly engage the PTO drive. Refer to PTO Drive Operation.
- 8. Gradually begin feeding grain into the hopper, bringing the tractor PTO drive to roughly half speed. Do not overfeed the hopper on initial loads; keep the feed of grain at about half capacity.

9. Be aware of unusual sounds. If any are heard, determine the source and stop the auger. Lock out the power and correct the problem before resuming work. If you are unsure of the problem or procedure, contact your local dealer.

Note

The auger may run rough until the tube is polished.

- 10. After the auger tube is polished and runs fairly smoothly, proceed to unload at the specified full PTO speed. Do not exceed the specified full PTO speed (see Section 9. Specifications on page 103).
- 11. Do not run the auger for long periods of time without material because it increases wear. Try to run only when moving material.
- 12. Stop the auger when it is empty of grain, lower fully and lockout power.

Important

After the initial start-up and inspection, the auger should be shut down and visually inspected (see Maintenance Section) after approximately ten hours of operation.

6.4. Operation — PTO Drive

- 1. Attach the PTO driveline securely to the tractor and confirm the connection to the auger shaft is secure.
- 2. Confirm the PTO driveline rotating shield and other shields/guards are in place and in good working order.
- 3. Align the tractor axis with the auger input shaft to minimize the angles of the universal joints on the PTO driveline.

Important

Check that the PTO does not exceed the maximum operating angle, refer to Section 9. – Specifications on page 103.

- 4. Confirm that the auger-to-tractor PTO hookup distances are set as required.
- 5. Ensure the PTO drive on the tractor is in the off position before starting the tractor.
- 6. Start tractor engine at low idle, slowly engage the PTO with the tractor idling to prevent unneeded stress on the drive components and shear bolts.
- 7. If everything is operating normally, start running grain through the auger and increase the tractor PTO to the specified full speed to produce the required flow.
- 8. To shut down, reduce the speed to low idle and lock out the PTO.
- 9. Disconnect the PTO driveline from the tractor and secure it to the PTO transport saddle with the safety chain and keep it in transport saddle when transporting.

When raising or lowering the auger:

Disconnect the PTO driveline.

When starting under load:

If restarting the auger under load (tube is full), engage the PTO with the tractor idling.



Engaging the PTO at high engine speed under load will result in equipment damage.

Shear Bolts:

If a shear bolt in the PTO driveline fails, shut down and lock out the tractor to replace the shear bolt. Ensure that the shear point is through the shank of the bolt, not the threads. Refer to Section 9. – Specifications on page 103 for shear bolt sizes.

6.4.1 PTO Speed Reducer

An optional 1000 RPM PTO Drive kit provides a speed reducer that allows use with 1000 RPM PTO tractors, as well as reverser capability that is used to rotate the auger flightings in the reverse direction (transferring grain in the auger tube back to the hopper).

6.4.2 PTO Operation — Forward and Reverse Modes

Note

Reverse mode is intended to assist in clean out of the auger. It is not designed to unplug the auger. When operating in reverse mode, the auger must be monitored to prevent the boot from overfilling.



Shut down and lock out power before changing to forward or reverse modes.

To Operate in Forward Mode:

The stub spline on the PTO driveline must be inserted into the forward spline coupler and securely locked into place.


To Operate in the Reverse Mode:


- 1. Insert the stub spline on the PTO driveline into the reverse spline coupler, making certain it is securely locked into place.
- 2. Open the cleanout doors on the boot before operating in reverse mode.
- 3. Operate the auger slowly in reverse for a short period of time. Do not exceed 100 RPM.
- 4. When the boot is nearly full, shut off and lock out power, then clean out any remaining grain from the boot using a stick. Do not use your hands. Repeat the above procedure as needed.

NOTICE

Excessive back pressure will cause extensive damage to the auger which is not covered by warranty.

Forward and Reverse PTO Positions (540 RPM PTO Reverser)

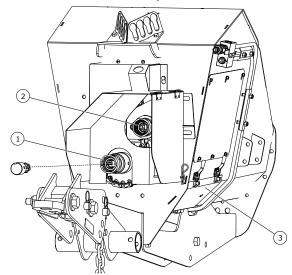

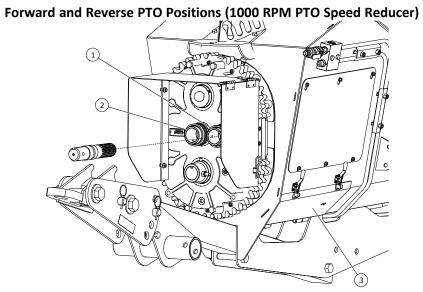

1	forward position	3	cleanout cover
2	reverse position		

64 31175 R3

6.5. X-Tend Operation

1. Lower the X-Tend from the transport position, tilt the end of the hopper up so that the weight is on the powerswing tires and place it in the unloading position, roughly perpendicular to the auger.

Note

In regular configurations, it should not be possible to contact the tractor cab by retracting the X-Tend, however use caution as this can happen when using a right angle PTO drive to operate your auger.

- 2. Lower the hopper fully to shift the weight from the powerswing tires onto the hopper tires.
- 3. Retract the X-Tend tube all the way.
- 4. Position the grain truck roughly two feet from the end of the X-Tend hopper, with the X-Tend hopper centered between the truck hoppers.
- 5. Extend the X-Tend tube fully.
- 6. Tilt/raise the X-Tend hopper up to shift the weight onto the powerswing tires and position it under the desired truck hopper.
- 7. Lower/tilt the X-Tend hopper to be flush with the ground when unloading.
- 8. Engage the tractor PTO, unload the grain truck until flow stops and close the truck hopper.
- 9. Repeat the procedure to unload the remaining truck hoppers.
- 10. Disengage the PTO drive.
- 11. Retract the hopper fully to move the grain truck out of the way.

Note

The X-Tend hopper position may be moved between truck hoppers with the PTO running as long as the spline shaft at the top does not become disengaged. On the 13" X-Tend there is 24" of free movement back from full extension. The end of free working travel is indicated by the X-Tend decal starting to appear from under the collector cover.



The spline can become damaged if they disengage while the PTO is operating.


Keep movement limited between the two truck hoppers.

6.6. Auger Steer Operation

- 1. Fully extend the steer axle assemblies. See Section 5.4 Extendable Axle Positioning with an Auger Steer Kit on page 48.
- 2. Remove the steer axle lock pins from the steer axle assemblies.

NOTICE Do not operate the auger when the steer axle assemblies are locked. This could damage the steering components.

3. Attach the steer axle lock pins to the steer axle.

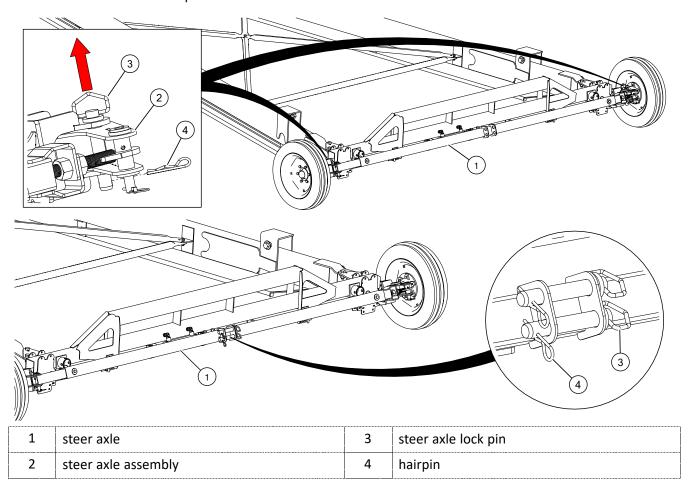

6.7. Safety Discharge Door

The auger is equipped with a safety discharge door which will allow grain to overflow out of the swing-away discharge spout and prevent the main auger tube from plugging. This will happen when the auger is at a steeper angle because the capacity of the auger will decrease as the tube angle increases. If the safety discharge door opens, decrease the flow of grain to the swing-away intake hopper or lower the angle of the auger tube.

6.8. Emergency Shutdown

In an emergency situation:

- 1. Shut down the power source immediately and lock out all power.
- 2. Stop the flow of material (if applicable).
- 3. Ensure the machine components come to a stop before inspecting.
- 4. Correct the emergency situation before resuming work.

6.9. Restarting with a Full Tube

When the auger is shut down inadvertently or due to an emergency, the tube may still be filled with grain.

- 1. With the power source locked out, remove as much of the grain as possible from the tube and intake using a shop vacuum or other tool. Do not use your hands.
 - NOTICE Starting under load may result in damage to the auger.
- 2. Close or replace guards or covers before restarting.
- 3. If the auger tube is full of grain, do not restart at full speed. Engage the drive at low power, gradually increasing until normal operating speed is reached.
- 4. Once the auger has been started, resume normal operation.

6.10. Bin Level Indicators

A full bin will cause the auger to plug, which can damage the flighting and other drive components. Installing grain-level indicators on bins will allow monitoring of bin filling and help prevent damage to the auger.

6.11. Using the Auger with Grain Spreaders

Some grain spreaders may not be able to handle the capacity of the auger and can cause the auger to plug, damaging the flighting and other drive components. This type of damage is not covered by warranty. To avoid this:

- Make sure spreader is turned on and operating.
- When using a flex down spout, center auger spout above spreader and do not lower auger spout into spreader.
- Suspend the spreader lower from bin ceiling leaving extra room for excess grain to flow over the spreader.
- · Get a larger spreader, if available.
- Remove the spreader.

6.12. Shutdown

When operation has been completed:

- 1. Once auger is clear of grain, lock out the power source.
- 2. Clean out any remaining grain from the auger with a vacuum or sweep out.
- 3. Clean the entire work area.
- 4. Remove anchors, supports, and chocks.
- 5. Disconnect the PTO driveline, and raise the intake hopper off the ground.
- 6. Move the auger away from the bin, and ensure that there is nothing under the auger that would make contact when the auger tube is lowered.
- 7. Lower the auger, refer to Raising and Lowering.
- 8. Lift the intake feed hopper fully into transport position, and secure it with the safety chain, refer to Raising and Lowering the Intake Hopper.

6.13. Handling Fertilizer

If the auger has been used to move fertilizer, it should be cleaned out to prevent corrosion. The easiest way to prevent corrosion is to run a load of grain through it after moving fertilizer or wash the auger.

6.14. Storing the Auger

After the season's use, thoroughly inspect the auger and prepare it for storage. Repair or replace any worn or damaged components and perform maintenance to prevent downtime at the start of the next season.

To ensure a long, trouble-free life, follow the below procedure.

- 1. Remove all residual material from the hopper and the tube.
- 2. Wash the auger thoroughly using a water hose or pressure washer to remove all dirt, mud, debris, or residue. Be careful to not contact electronic controls with high pressure water.
- 3. Inspect all moving or rotating parts to see if anything has become entangled in them. Remove any entangled material.
- 4. Touch up all paint nicks and scratches to prevent rusting.
- 5. Check tire pressure and inflate. For inflation pressure, refer to Section 9. Specifications on page 103.
- 6. Inspect the auger for cracks, tightness of fittings and fasteners, and hydraulic hose cracks (if applicable). Have required repairs performed to replace worn or damaged components.
- 7. Store in an area that is dry, level, free of debris, and away from human activity. Store inside if possible.
- 8. Chock wheels.
- 9. Clean and lightly lubricate the spline on the PTO driveline. Cover the PTO driveline with a plastic bag to protect it from the weather and place it in the transport saddle.
- 10. Lower the auger fully for storage.
- 11. Place the swing-away hopper in transport position, ensuring there will be adequate drainage of any moisture.

Power Swing

₩ When Equipped:

- 1. Raise wheels to full up position.
- 2. Clean out axle assembly and lubricate chains with a light coating of oil.
- 3. Inspect unit for damage and note any repairs required. Order replacement parts from your dealer.
- 4. Check tire pressure and inflate according to tire side-wall recommendations.

X-Tend

When Equipped:

- Inspect the unit for damage and note any repairs required. Order replacement parts from your dealer.
- Grease the spline shaft.
- Fully extend the system so that the spline shaft is inside the collector and away from the elements.
- Check the tire pressure and inflate according to the tire side-wall recommendations.

7. Maintenance

Proper maintenance will improve safety, efficiency, and will keep the auger operating reliably.

7.1. Maintenance Safety

MARNING

- Keep components in good condition. Follow the maintenance procedures.
- Ensure the service area is clean, dry, and has sufficient lighting.
- Do not modify any components without written authorization from the manufacturer. Modification can be dangerous and result in serious injuries.
- Shut down and lock out power before maintaining equipment.
- After maintenance is complete, replace all guards, service doors, and/or covers.
- Use only genuine AGI replacement parts or equivalent. Use of unauthorized parts will void warranty. If in doubt, contact AGI or your local dealer.

Before attempting maintenance of any kind:

- · Lower the auger fully.
- · Chock wheels.
- Support the tube if performing maintenance on the undercarriage assembly.
- If equipped with hydraulics: Before applying pressure to a hydraulic system, make sure all components are tight and that hoses and couplings are in good condition.



7.2. Maintenance Schedule

Follow the maintenance procedures below. Keep records of the hours the auger has been operated and the maintenance performed.

va	•	· •

Section 7.3 – Visually Inspect the Equipment on page 72

Section 7.4 – Lubricate the Equipment on page 72

Section 7.29 – Inspect the Retroreflective Strips on page 97

Weekly:

Section 7.5.1 – Weekly Service for the X-Tend on page 75

Section 7.19 - Check X-Tend Chain Tension on page 86

Monthly:

Section 7.6 – Inspect Hydraulic Hoses and Fittings on page 77

Section 7.14 – Check Upper and Lower Gearbox Oil Levels on page 83

Section 7.16 – Check Speed Reducer Gearbox Oil Level on page 84

Semi-Annually:

Section 7.5.2 – Semi-Annual Service for the X-Tend on page 76

Annually:

Section 7.5.3 – Annual Service for the X-Tend on page 77

Section 7.7 – Lubricate the Upper Bearing on page 78

Section 7.20 – Inspect the X-Tend Spline Shaft and Tube on page 90

Section 7.21 – Align the X-Tend Spline Shaft on page 90

Section 7.22 - Clean and Wash the Equipment on page 91

Section 7.23 – Removable Hopper Mesh Guard on page 92

2-3 Years:

Section 7.10 - Service the Pulleys on page 81

Section 7.11 – Service the Swing Tube Coupler Chain on page 81

Section 7.12 – Service the Gearbox Coupling Shaft on page 82

Section 7.13 – Service the Boot and Hopper Chain Drive on page 82

Section 7.15 - Change the Gearbox Oil on page 84

Section 7.17 - Change the Speed Reducer Gearbox Oil on page 84

Section 7.18 – Service the Landing Gear Power Swing Drive Chain on page 85

When equipped: Section 7.8 – Inspect and Service the Hand Winch and Lift Cable on page 80

When equipped: Section 7.9 – Inspect and Service the Hydraulic Winch and Lift Cable on page 80

As Required:

Section 7.24 – Repack the Wheel Bearings with Grease on page 93

Section 7.25 - Check/Adjust the Truss Cables (64/74 Models) on page 93

Section 7.26 - Check/Adjust the Side Truss (84/94/114 Models) on page 95

Section 7.27 – Power Swing Remote Transmitter on page 96

Section 7.28 – Replace the Auger Stabilizer Wear Edge Mounts on page 97

7.3. Visually Inspect the Equipment

⚠ WARNING

Lock out power before inspecting.

Check the following during a visual inspection:

- 1. Ensure all guards are in place and in good working order.
- 2. Examine the auger for damage or unusual wear.
- 3. Check tightness of bolts/nuts, fasteners, and hardware (re-torque if necessary).
- 4. Be sure all safety decals are in place and are legible.
- 5. Check that the discharge and intake area are free of obstructions.
- 6. Inspect all moving or rotating parts to see if anything has become entangled in them. Remove any entangled material.
- 7. Inspect hydraulic hoses and fittings for leaks and wear. Fix or replace where necessary.
- 8. Check wheel bolts are tight and examine tires for gashes, uneven wear, or loss of air pressure. See Section 9.

 Specifications on page 103 for recommended tire pressure and torque information.
- 9. Check all operating, lifting, and transport components. Replace damaged or worn parts before using the auger.
- 10. Check the PTO shield and replace if damaged.
- 11. Inspect the truss cables for proper tension and possible damage such as fraying, kinking, or unwinding.
- 12. Inspect the winch cable for fraying, kinking, unwinding, or other possible damage.

7.4. Lubricate the Equipment

Your equipment can operate at top efficiency only if clean fluids and lubricants are used. Use clean containers to handle all fluids and lubricants. Store them in an area protected from dust, moisture, and other contaminants.

- 1. Wipe the grease fittings with a clean cloth before greasing to avoid injecting dirt and grit.
- 2. Use a hand-held grease gun for all greasing.
- 3. If fittings will not take grease, remove and clean thoroughly.
- 4. Replace fittings if they are broken or will not accept grease.

Use SAE multi-purpose high-temperature grease with extreme pressure (EP) performance. SAE multi-purpose lithium-based grease is also acceptable.

7.4.1 Grease Points

Apply grease to:

- six fittings on the intake hopper, u-joints and bearings Figure 17.
- one fitting at the upper flighting bearing Figure 18.
- one at the u-joint between gearboxes Figure 19.
- one at the lower flighting bearing Figure 19.
- five fittings on the PTO Figure 20.
- six fittings on the auger steer, if applicable Figure 21.

Figure 17. Intake Hopper Grease Points

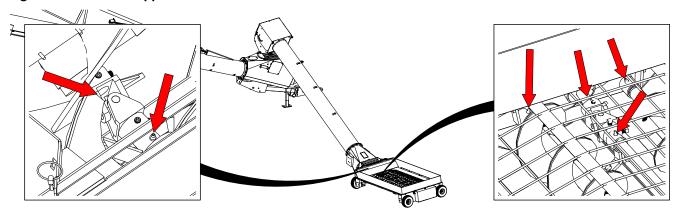


Figure 18. Upper Flight Bearing Grease Point

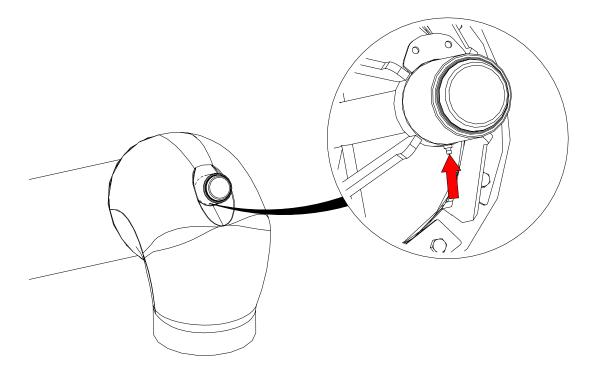


Figure 19. Boot Grease Points

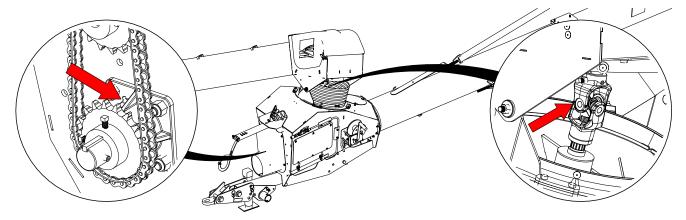


Figure 20. Typical PTO Driveline Grease Points


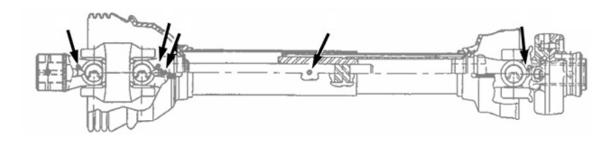


Figure 21. Auger Steer (Optional) Grease Points

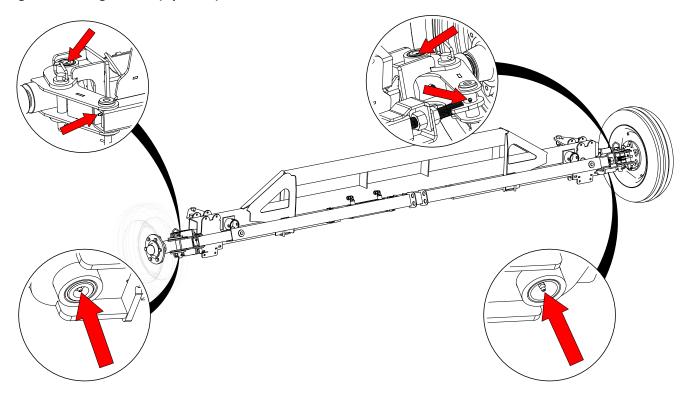


7.5. Grease and Lubricate the X-Tend

7.5.1 Weekly Service for the X-Tend

Complete the following maintenance weekly.

- Grease the hopper u-joints (2 locations)
- Grease the collector swivel ring u-joint (1 location)
- Lubricate the drive spline—lightly coat the spline shaft with grease or spray lube

Figure 22. X-Tend Grease and Lubrication Points

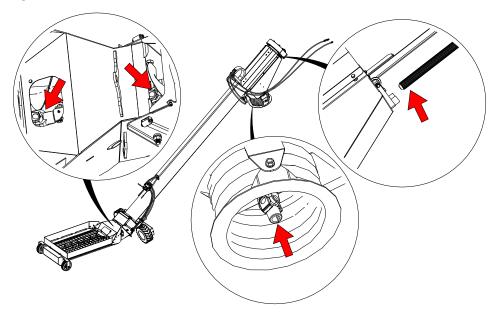


7.5.2 Semi-Annual Service for the X-Tend

Complete the following maintenance semi-annually.

- Oil hopper drive chain with a light coat of oil.
- Oil wheel drive chain with a light coat of oil.
- Oil the auger chain drive with a light coat of oil.


Figure 23. X-Tend Lubrication Points

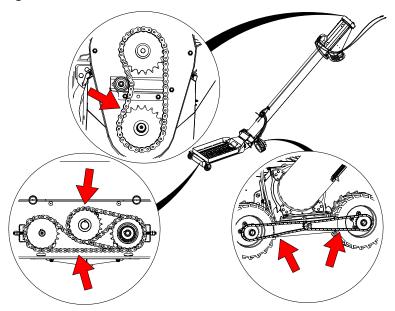

7.5.3 Annual Service for the X-Tend

- Grease hopper bearings—1 shot (3 locations)
- Grease the hopper flight support bushings (2 locations)
- Grease the transition flight support bushings (2 locations)
- Grease auger chain drive bearings—1 shot (3 locations)

Figure 24. X-Tend Grease Points

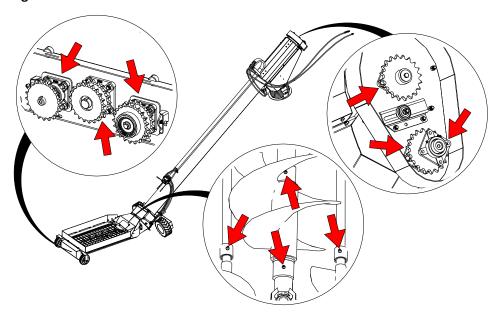

7.6. Inspect Hydraulic Hoses and Fittings



- 1. Pressurize the system.
- 2. Using a piece of cardboard or wood, run it along the length of the hose and around all fittings.
 - **WARNING** Escaping hydraulic fluid under pressure will cause serious injury if it penetrates the skin surface.
- 3. Replace the hose or tighten/replace the fitting if a leak is found. For replacement hoses, refer to Section 9. Specifications on page 103.
- 4. Replace any hose that is badly cut, nicked, abraded, or is separating from the crimped end of the fitting.
- 5. Secure hoses to the machine.


7.7. Lubricate the Upper Bearing

The thrust adjuster lock nut must be tightened until the connection between the bearing, bushing, and lock nut is snug.

Important

When fully tightened, between 1/4" and 3/4" (5 mm and 20 mm) of threaded shaft must be visible above the lock nut to ensure that the nylon locking mechanism is fully engaged.

- 1. Ensure the swing hopper is secured in transport position.
- 2. Chock the auger wheels.
- 3. Unhook the tractor from the auger.
- 4. Secure the sling to the lower tube/boot. Using a loader/forklift, elevate the lower tube/boot to a height where the discharge spout is at a serviceable height.
- 5. Remove the dust cap.
- 6. Remove the lock nut, bushing, shims (if applicable), and small tapered bearing.
- 7. Pack the tapered bearing with grease.
- 8. Re-install the tapered bearing, shims (if applicable), bushing, and lock nut.
- 9. Tighten the lock nut until the bushing is snug (the bushing does not move when pushed firmly by a punch) and between 1/4" and 3/4" (5 mm and 20 mm) of threaded shaft is visible above the nut.
 - If less than 1/4" (6 mm) of threaded shaft is visible, remove one or more 1/4" shims (depending on what is required), and re-tighten until fully tightened.
 - If the nut cannot be tightened to the point where the bushing is snug and more than 3/4" (19 mm) of threaded shaft is visible, install one or more additional 1/4" spacers (not supplied, but available to order) between the bearing and the bushing, and re-tighten until fully tightened.
- 10. Using the grease zerk, fill the bottom bearing cavity with grease until it comes through the bearing housing.
- 11. Fill the bearing housing with a full tube of grease. If the entire tube does not fit, put some of the grease inside of the dust cap.
- 12. Re-install the dust cap.

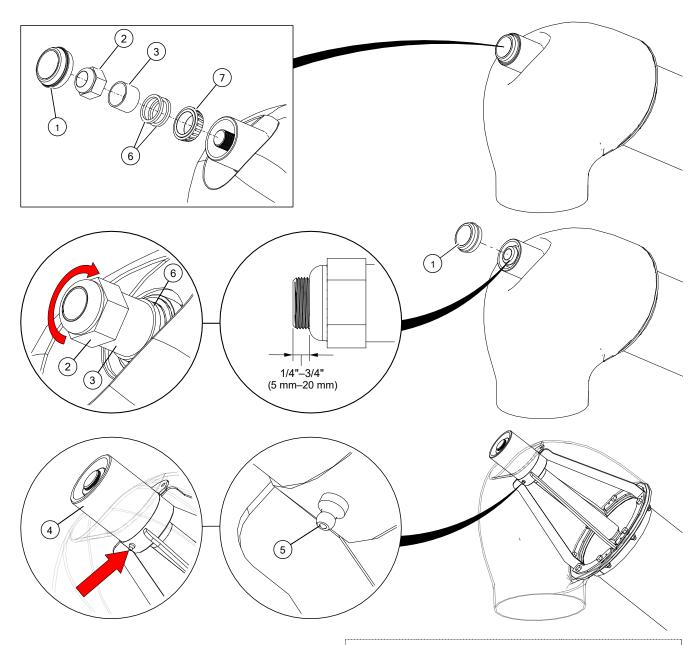

Scan the QR code to watch a video on how to grease the upper bearing.



Assembly Note:

• Use SAE multi-purpose high-temperature grease with extreme pressure (EP) performance.

1	dust cap
2	lock nut, 1-1/2"
3	bushing
4	bearing housing
5	grease zerk
6	shim, 1/4"
7	small tapered bearing

7.8. Inspect and Service the Hand Winch and Lift Cable

>

When equipped:

WARNING Place the hopper in fully lowered position with cable slack.

- 1. Inspect the cable for damage such as fraying, kinking, or unwinding. Replace if damaged (see below).
- 2. Check to make sure cable clamps are secure.
- 3. Oil cable pulleys as needed.
- 4. Keep a film of grease on the gears. Occasionally oil the bushings, drum shaft, and ratchet.
- 5. Do not get oil or grease on brake discs.
- 6. Replace brake discs if less than 1/16" (2 mm) thick.
- 7. Check for proper ratchet pawl operation:
 - When cranking in (clockwise) = loud clicking
 - When cranking out (counterclockwise) = no clicking and ratchet pawl fully engaged into gear teeth.

To Replace the Hopper Lift Cable:

- 1. Unwind the winch drum until cable is slack and remove all cable clamps.
- 2. Free the cable from the winch and pulleys.
- 3. Reverse the above steps to install the new cable.

7.9. Inspect and Service the Hydraulic Winch and Lift Cable



When equipped:

⚠ WARNING

Place the hopper in the fully lowered position with the cable slack.

To Inspect the Hopper Lift Cable:

- 1. Inspect the cable for damage such as fraying, kinking, or unwinding. Replace if damaged (see below).
- 2. Check to make sure the cable clamps are secure.
- 3. Oil the cable pulleys as needed.
- 4. Occasionally oil the bushings and drum shaft.


To Replace the Hopper Lift Cable:

- 1. Unwind the winch drum until the cable is slack and remove the cable clamps.
- 2. Free the cable from the winch and pulleys.
- 3. Reverse the above steps to install the new cable.

7.10. Service the Pulleys

- Ensure the cable is slack before servicing the winch.
- Check to make sure cable clamps are secure.
- Oil cable pulleys as needed.


Figure 25. Cable Pulleys

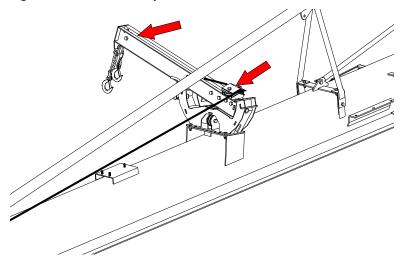

7.11. Service the Swing Tube Coupler Chain

- 1. Remove any accumulated debris with a cloth or a soft wire brush.
- 2. Inspect the power transfer chain for wear.
- 3. Lightly oil the chain.


Figure 26. Swing Tube Coupler Chain

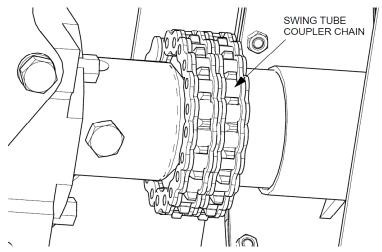

7.12. Service the Gearbox Coupling Shaft

- 1. Remove any accumulated debris with a cloth or a soft wire brush.
- 2. Inspect the gearbox coupling shaft and u-joints for wear and damage.

Figure 27. Gearbox Coupling Shaft U-Joint

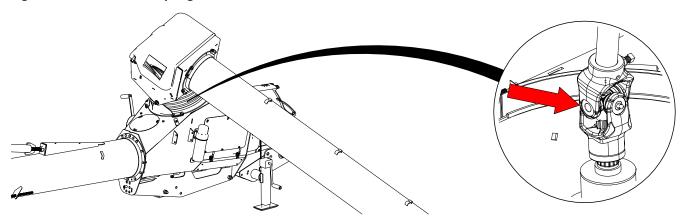

7.13. Service the Boot and Hopper Chain Drive

- 1. Remove chain cover plate from the boot or hopper.
- 2. Check the chain slack at the midpoint of the longest span. It should be no more than 1/4" (6 mm).

Note


The hopper has two chains, one for each flighting.

3. Adjust the chain slack for the boot by loosening the 4 bolts of the lower bearing and adjust the chain slack, see Figure 28.

Note

If the chain can't be tightened enough, remove a link from the chain. If the chain will not fit with one link removed, add a half link to the chain and replace.

Figure 28. Boot Chain Drive

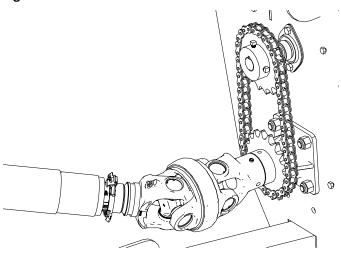

4. Tighten or loosen the adjustment nut on the side to set the chain slack for the hopper.

Note


If the chain can't be tightened enough, remove a link from the chain. If the chain will not fit with one link removed, add a half link to the chain and replace.

NOTICE

Improper adjustment of chain will result in premature wear.

5. Lightly oil the chain.

Figure 29. Hopper Chain Drive

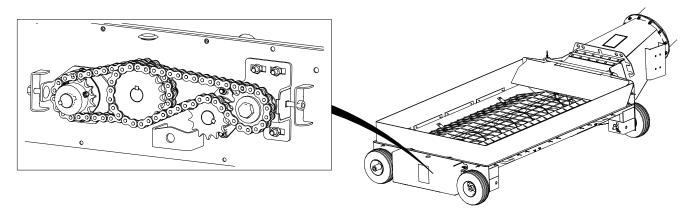

7.14. Check Upper and Lower Gearbox Oil Levels

Gearbox Access

Upper Gearbox: Unfasten latches, open spout-head lid, and service gearbox as required.

Lower Gearbox: Open square service door and service gearbox as required.

Checking Oil Level

Note

The gearbox should be level when checking or refilling oil.

- 1. Remove the oil filler plug located on the side of the gearbox.
- 2. Insert an improvised dipstick (rolled paper or plastic tie) into the oil filler hole to determine the oil level.
- 3. Note the level and the condition of the oil.
- 4. If the condition of the oil is poor, consider replacing the oil ahead of schedule.
- 5. If the oil level is not within 1/4" [5 mm] of the oil filler plug, top up the oil level. Do not overfill.
- 6. Replace the oil filler plug, ensuring that it is tightened firmly.

7.15. Change the Gearbox Oil

Use SAE approved 90W or equivalent gear oil.

- 1. Remove gearbox from the auger.
- 2. Place a pan under the drain plug.
- 3. Use a wrench and remove the drain plug.
- 4. Loosen the filler plug so air can enter the gearbox and the oil will drain freely.
- 5. Allow the oil to drain completely.
- 6. Replace the drain plug.
- 7. Add oil until the gearbox is half full (center of cross shaft) and replace filler plug. A flexible funnel may be required. Gearbox should be level when checking or refilling. **Do not overfill.**
- 8. Reinstall the gearbox and guards.

7.16. Check Speed Reducer Gearbox Oil Level

Accessing the Gearbox

Remove the hairpin securing the gearbox safety cover, fold up the safety cover, and service gearbox as required. Replace and secure the gearbox safety cover after service is complete.

Checking the Oil Level

The speed reducer gearbox should be level when checking or refilling oil.

- 1. Remove the oil filler plug located to the right of the lower flight gearbox shaft.
- 2. Insert an improvised dipstick (rolled paper or plastic tie) into the oil filler hole to determine the oil level. Note the level and the condition of the oil.
 - If the condition of the oil is poor, consider replacing the oil ahead of schedule.
 - If the oil level is not within 1/4" [5 mm] of the oil filler plug, top up the oil level. Do not overfill.
- 3. Replace the oil filler plug, ensuring that it is tightened firmly.

7.17. Change the Speed Reducer Gearbox Oil

Note

The speed reducer gearbox should be level when changing oil.

- 1. Place a pan under the drain plug located on the bottom of the speed reducer gearbox.
- 2. Remove the drain plug.
- 3. Remove the filler plug on the right-hand side of the gearbox, so air can enter the gearbox and allow the oil to drain freely.
- 4. When the oil has drained completely, replace the drain plug, ensuring that it is tightened firmly.
- 5. Add oil to the gearbox until the oil level is up to the middle of the sight glass located to the right of the lower flight gearbox shaft. A flexible funnel may be required. Do not overfill.
- 6. Re-install the filler plug, ensuring that it is tightened firmly.

7.18. Service the Landing Gear Power Swing Drive Chain


1. Keep the drive chain tension adjusted to about 1/4" (5 mm) deflection by loosening the four bolts on the hydraulic or electric motor mount, then retighten.

Note

The power swing has two chains, one for each motor.

- 2. Oil chain frequently enough to keep a light film of oil on it.
- 3. Replace guards when complete.


Figure 30. Location of the Bolts for Adjusting the Chain Tension

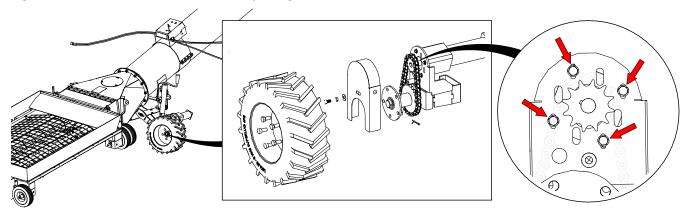

7.19. Check X-Tend Chain Tension

Complete the following maintenance weekly.


Figure 31. X-Tend Chain Tension Check Points

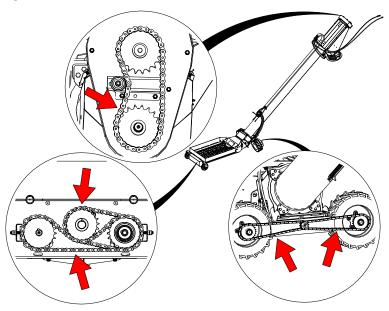

Adjusting the Hopper Drive Chain Tension

Adjust the hopper drive chain tension following the procedure below.

- 1. Remove the hopper chain guard.
- 2. Inspect the sprockets and chains for wear or misalignment.
- 3. Loosen the bearing nuts for the sprocket that is to be tightened.
- 4. Loosen the chain tensioner bolt nuts and adjust bolt to take the slack out of the chain. Overtightening will cause excessive wear.
- 5. Tighten the nuts on the adjust bolt to lock in place.
- 6. Tighten the bearing nuts and replace the guard.

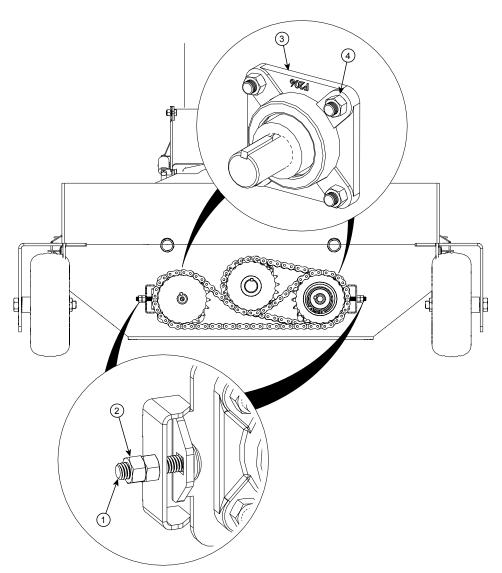


1	tensioner bolt	3	bearing
2	tensioner holt nut	4	bearing nut

Adjusting the Wheel Drive Chain Tension

Adjust the wheel drive chain following the procedure below.

- 1. Remove the guard and check the chain tension. The chain should have approximately 1/2" slack in the middle.
- 2. To tighten the chain, loosen the four bolts on each wheel spindle and draw the wheel spindle away from the center using the draw bolt on each end of the housing. Do not completely remove the spindle bolts. Loosen the spindle to allow it to slide freely when adjusting the draw bolts.
- 3. Re-tighten the four bolts on each wheel spindle and replace the guard.

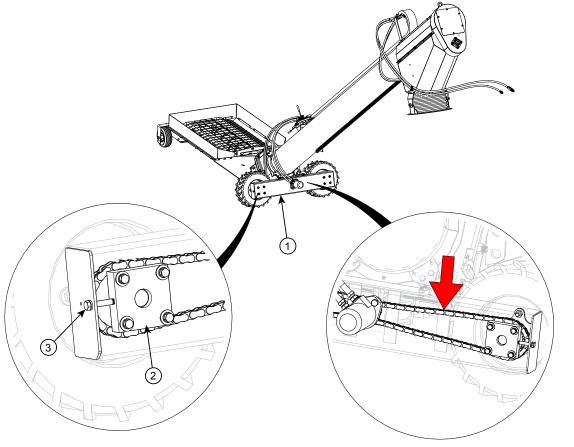


1	power swing frame	3	draw bolt
2	spindle		

Swing Auger Chain Tension

Adjust the swing auger chain drive following the procedure below.


- 1. Remove the chain box access cover.
- 2. Loosen the nut on the end of the chain tensioner roller and move the idler sprocket toward the chain until the chain has approximately 1/2" slack in the middle.
- 3. Tighten the nut and replace the access cover.

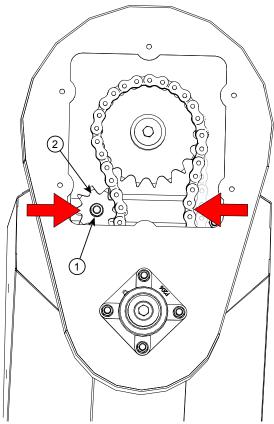

1 chain tensioner roller nut 2 idler sprocket


7.20. Inspect the X-Tend Spline Shaft and Tube

- 1. Remove any accumulated debris with a cloth or soft wire brush.
- 2. Inspect the spline shaft and tube for damage. These are wear components, replace if necessary.
- 3. Grease the spline shaft.

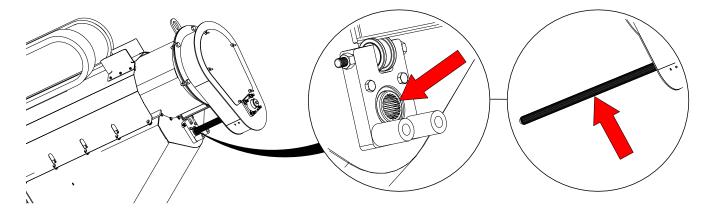


7.21. Align the X-Tend Spline Shaft

- 1. Retract the X-Tend enough so the end of the male spline shaft becomes visible.
- 2. Loosen the nuts on both lower bearings of the chain tensioner box.
- 3. Line up the end of the spline shaft so that it is concentric to the female spline coupler.

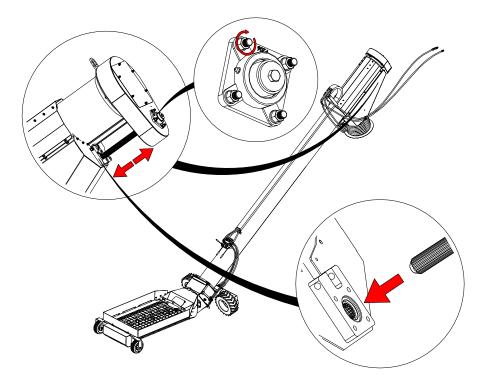

4. Tighten the lower bearing outside nuts.

5. Extend the system so that the chain tensioner box is close to bottoming out on the plastic stops (leave enough room to be able to tighten the inside bearing nuts in the next step).

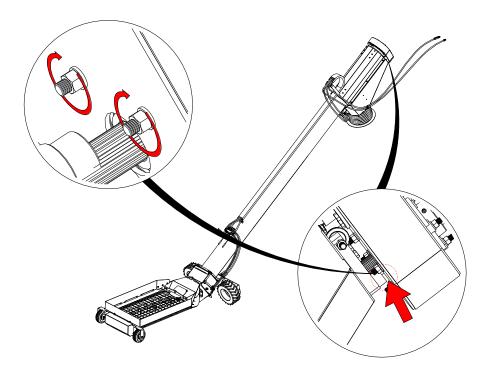

- 6. Tighten the lower bearing inside nuts.
- 7. Extend and retract the system to ensure that the spline shaft is now aligned properly.

7.22. Clean and Wash the Equipment

- 1. Clean out excess grain from all areas of the auger.
- 2. Make sure water can drain from the auger tube and intake, then wash the tube with a water hose or pressure washer until all dirt, mud, debris, or residue is gone.

Important

Do not contact electronic controls with high pressure washer.


3. Provide sufficient time for the water to drain from the auger.

7.23. Removable Hopper Mesh Guard

The hopper mesh guard can be removed for better access to cleanout or to service the hopper components.

DANGER Install hopper mesh prior to operation of the auger.

- 1. Remove the six hopper mesh straps securing the mesh guard to the hopper.
- 2. Remove the mesh guard.
- 3. Replace hopper mesh guard and secure using the six existing mesh straps.

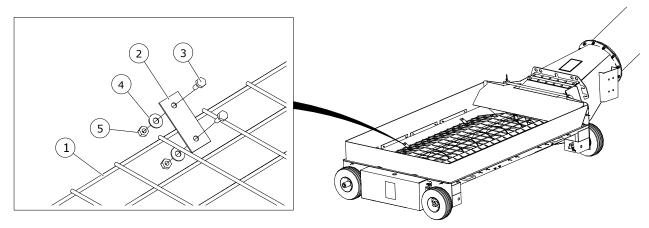


1	mesh guard	4	flat washer, 1/4"
2	mesh strap	5	lock nut, 1/4"
3	bolt, 1/4" x 3/4"		

7.24. Repack the Wheel Bearings with Grease

- 1. Block wheels and ensure unit is stable.
- 2. Remove the wheel bolts and the wheels.
- 3. Clean wheel and hub mounting surfaces to ensure there is no rust or debris.
- 4. Remove the wheel bearing and pack with grease. Use SAE multi-purpose high-temperature grease with extreme pressure (EP) performance. SAE multi-purpose lithium-based grease is also acceptable.
- 5. Tighten the wheel bolts (diagonal pattern) with a torque wrench to 100 ft-lb (±10 ft-lb) of torque. Inspect to make sure the wheel is sitting flush with the hub.

Figure 32. Diagonal Pattern for 4-bolt and 6-bolt Tires

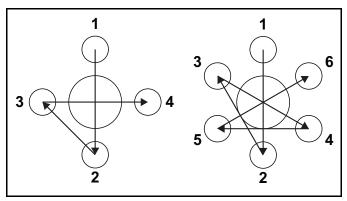

7.25. Check/Adjust the Truss Cables (64/74 Models)



When equipped with truss cables:

Check the Truss Cables:

Check tube for straightness, no slack in the cables, and a just noticeable upward deflection of the discharge end. During operation, it is normal that for the tube to deflect downward.

If required, adjust cables by following the procedure below:


- 1. Lift the discharge end of the auger with a overhead crane, front end loader, or other proper lifting device so that the tube has a slight upward deflection at the discharge to give the cable some slack.
 - **CAUTION** The lifting device must be capable of supporting approximately half of the weight of the auger as provided in the Specifications section.



- 2. When the auger has more than one set of cables start from the innermost cables and work your way out.
- 3. Loosen cable clamps on cable truss where the cable requires adjustment.
- 4. Locate the eyebolt anchors for the cable.
- 5. Tighten cable eyebolts evenly on both sides (use eyebolt nuts to tighten eyebolts) until the discharge end just starts to angle upward.
 - The tube should not deflect to the left or right if tightened evenly.
 - Tension should be greater on shorter cables than on longer cables. If the auger tubes remain straight then the cables are tensioned properly.

- 6. If the proper cable tension can't be obtained before the eyebolts run out of adjustment, then do the following:
 - a. Loosen the eyebolts.
 - b. At the eyebolts, loosen the cable clamps, shorten the cables until there is tension on the cable, then tighten the cable clamps fully.
 - c. Return to step 5.
- 7. Secure lock nut on cable eyebolt and re-tighten any cable clamps that were loosened.
- 8. The cables are properly tightened when:
 - There is no slack in the cables.
 - The discharge end is deflected sightly upwards.
 - The tube is straight side-to-side.

Typical Cable Truss Assembly

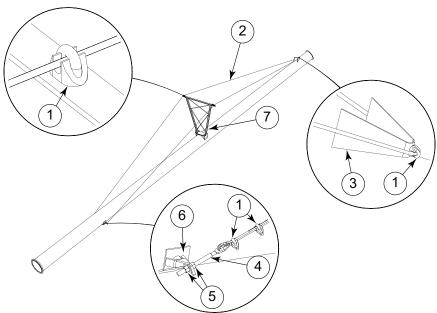

1	cable clamp	5	eyebolt nuts
2	truss cable	6	eyebolt anchor
3	cable return bracket	7	cable truss
4	cable eyebolt		

7.26. Check/Adjust the Side Truss (84/94/114 Models)



When equipped with truss cables:


Check the Side Truss Cables and Steel Trussing:

Check tube for straightness, with no slack in the cables.

If required, adjust cables by following the procedure below:

- 1. Lift the discharge end of the auger with a overhead crane, front end loader, or other proper lifting device so that the tube has a slight upward deflection at the discharge to give the cable some slack.
 - **CAUTION** The lifting device must be capable of supporting approximately half of the weight of the auger as provided in the Specifications section.
- 2. Adjust the bolted truss-anchors on either end of the auger (intake/discharge). Then let down the discharge end; repeat procedure until auger tube appears straight.
- 3. Loosen cable clamps on cable truss where the cable requires adjustment.
- 4. Locate the eyebolt turn buckles for the cable.
- 5. Tighten cable eyebolts evenly on both sides (use eyebolt nuts to tighten eyebolts) until the discharge end appears straight.
 - The tube should not deflect to the left or right if tightened evenly.
- 6. If the proper cable tension can't be obtained before the eyebolts run out of adjustment, then do the following:
 - a. Loosen the eyebolts.
 - b. At the eyebolts, loosen the cable clamps, shorten the cables until there is tension on the cable, then tighten the cable clamps fully.
 - c. Return to step 5.
- 7. Secure lock nut on cable eyebolt and re-tighten any cable clamps that were loosened.
- 8. The cables are properly tightened when:
 - There is no slack in the cables.
 - The tube is straight side-to-side.
 - The tube is straight up-and-down.

Typical Cable Truss Assembly

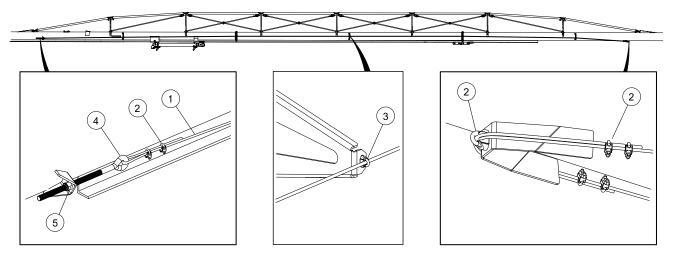

1	cable	4	eyebolt
2	cable clamp, 3/8"	5	lock nut, 5/8"
3	cable clamp, 5/16"		

7.27. Power Swing Remote Transmitter

Ensure that a 9V battery is installed in the back of the remote transmitter. To install:


- Remove the plastic from around the battery
- Then place the battery into the back of the remote control.

For proper replacement procedure, refer to Section 10.1 – Power Swing Remote Transmitter Instructions on page 105 in the Appendix section of this manual.

7.28. Replace the Auger Stabilizer Wear Edge Mounts

When equipped with the auger stabilizer kit:

- 1. Remove the damaged wear edge mount(s) from the auger lean cross member.
- 2. Install the new wear edge mount(s) using the existing shims, bolts, and lock nuts.

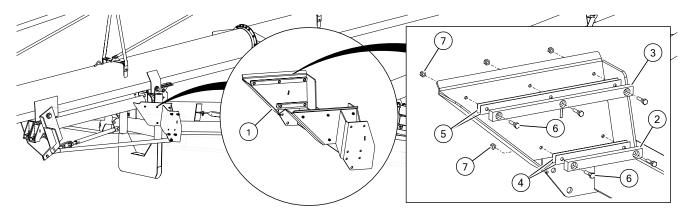



1	auger lean cross member	5	long shim
2	short wear edge mount	6	bolt, 5/16" x 1-1/4"
3	long wear edge mount	7	lock nut, 5/16"
4	short shim		

7.29. Inspect the Retroreflective Strips


Replace missing or damaged retroreflective strips.



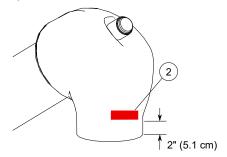


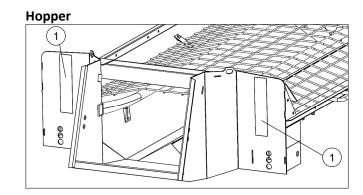


Lower and Upper Arms

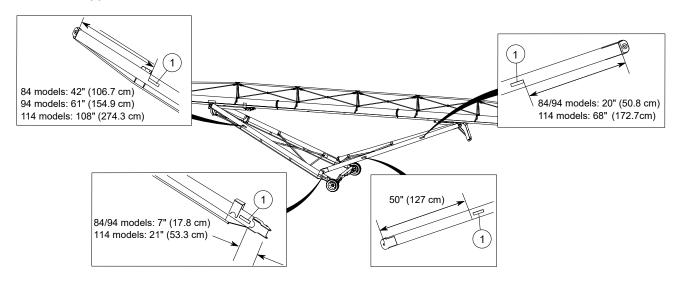

Upper Tube (114 Models Only)

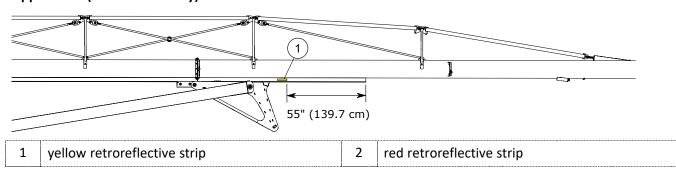


Optional Work/Transport Light Kits (84/94/114 Models)

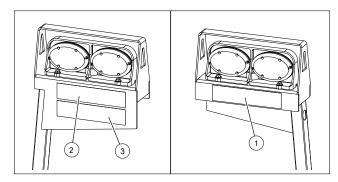


1	yellow retroreflective strip
2	red retroreflective strip
3	orange nonreflective strip


Upper Tube (84/94/114 Models)

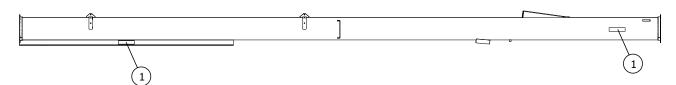


Lower Tube (84 Models)

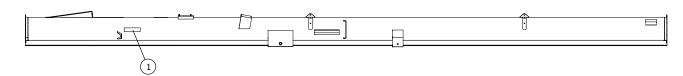


Lower Tube (94 Models)

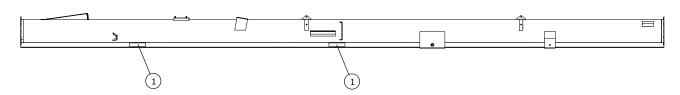

Lower Tube (114 Models)

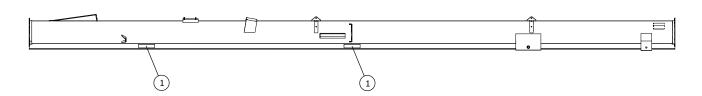

Axle (84/94/114 Models)

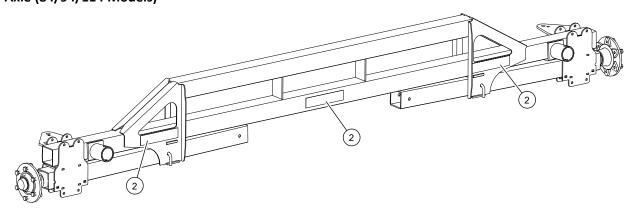

1 yellow retroreflective strip 2 red retroreflective strip

8. Troubleshooting

Find causes and solutions to common problems that can be encountered.



Before continuing, ensure you have completely read and understood this manual's Safety section, in addition to the safety information in the section(s) below.



Shut down and lock out all power sources before diagnosing any of the causes or attempting any of the solutions below.

The following section covers some causes and solutions to some of the problems that may be encountered.

If there is a problem that is difficult to solve, even after having read through this section, please contact your representative or AGI. Have this manual and the serial number available.

X-Tend

Problem	Cause	Solution
Low capacity	Tractor PTO rpm is set too slow	Adjust the tractor to 1000rpm if using a reducer gearbox and 540rpm if not using a reducer.
Sprocket that moves the retractor tube in and out is slipping on chain.	The retractor tube chain is not close enough to the sprocket.	Loosen the bolt that attaches the guide bearing. Adjust the tensioner bolt to push the guide bearing against the track to move the chain closer to the sprocket. Retighten the guide bearing bolt.
Hydraulic functions are too fast.	Hydraulic flow is set too high on tractor.	Lower the hydraulic flow on the tractor. Should be approximately 8 GPM.

Auger

Problem	Cause	Solution
Poor product flow.	Input speed is too slow.	Increase engine rpm.
	Inadequate material flow from truck or hopper.	Increase flow of material.
	Flow into the hopper is restricted.	Clear grating of obstructions.
	Material is too wet or heavy.	Unloading rates are for dry grain.
	Flighting is worn.	Repair or replace as required.
The flighting does not turn.	Auger flighting is plugged or obstructed.	Identify and remove obstruction.

Problem	Cause	Solution
	The coupler bolt below the non-rotating section is broken or missing.	Replace the bolt.
	Bearing is seized.	Identify the bearing and replace.
	A chain is broken.	Identify the chain and repair or replace.
	Gearbox is seized.	Fix or replace the gearbox.
	Gearbox coupler bolt is broken or missing.	Replace the bolt.
	A PTO shear bolt has failed.	Replace both PTO shear bolts.
Auger flighting is	Obstruction in the auger tube.	Identify and remove obstruction.
noisy.	Flighting shaft bolts are loose or damaged.	Tighten or replace bolts.
	Flighting shaft is bent.	Repair or replace flighting shaft.
	Flighting is damaged.	Repair or replace flighting.
	Worn bearing.	Repair or replace bearing.
	Low gear oil level.	Inspect the gearbox, replace if damaged or add oil if not damaged.
Tube is misaligned.	Loose truss cables.	Tighten cables as required.

A-Frame

Problem	Cause	Solution
The auger will not	Closed hydraulic valve.	Open hydraulic valve.
raise or lower.	Inadequate hydraulic pressure.	Adjust the pressure if possible, or use an alternate hydraulic supply.
	Damaged cylinder.	Fix or replace the cylinder.
	Missing or broken cylinder pin.	Replace cylinder pin.
	Hydraulic system leak.	Identify and repair leak.

Problem	Cause	Solution	
	Auger movement is obstructed.	Identify and clear the obstruction.	
The auger will not stay in the elevated	Leak in auger hydraulic cylinder, fittings, or hose.	Lower auger to transport position and repair leaks as required.	
position.	Leak in tractor hydraulics.	Close hydraulic valve to isolate cylinder from tractor hydraulics.	

9. Specifications

Table 3. MKX²/X²/HX² 13 Specifications

Specification	13-64	13-74	13-84	13-94	13-114	
Tube Size	13" (33.0 cm)					
CAPACITIES						
Unloading Rate		8700-9600 Bu/Hr				
TRANSPORT DIMENSIONS						
Length	67'6" (20.6 m)	78' (23.8 m)	87'6" (26.7 m)	97'8" (29.8 m)	117'3" (35.7 m)	
Width	124" (3.15 m)	130" (3.30 m)	12'2" / 15'2" (3.71 m / 4.62 m)			
Height	12'8" (3.86 m)	14'3" (4.34 m)	13' (3.96 m)	13' (3.96 m)	14'5" (4.39 m)	
DISCHARGE CLEARANCE DIMENSIONS						
Min	10'2" (3.10 m)	11'11" (3.63 m)	10'6" (3.2 m)	10'6" (3.2 m)	12' (3.66 m)	
Max	40'3" (12.3 m)	45'7" (13.9 m)	59'5" (18.11 m)	60'3" (18.36 m)	68'11" (21.01 m)	
REACH TO WHEELS	REACH TO WHEELS					
Min	27'8" (8.43 m)	31'2" (9.5 m)	31'5" (9.58 m)	37'1" (11.30 m)	46'2" (14.07 m)	
Max	31'1" (9.47 m)	35'7" (10.9 m)	44'10" (13.67 m)	45'8" (13.92 m)	56'1" (17.09 m)	
TIRES						
Туре	16" Bias Ply					
Inflation Pressure		See Manufacturer Recommended Pressure on Tire Sidewall				
WEIGHT						
Total Weight	4349 lb (1973 kg)	4647 lb (2107 kg)	6544 lb (2968 kg)	7642 lb (3466 kg)	9109 lb (4131 kg)	
POWER RECOMMENDATION	POWER RECOMMENDATIONS					
PTO Drive	85-100 HP	110-125 HP	115-155 HP	125-165 HP	140-185 HP	
PART SPECIFICATIONS						
PTO Speed	550 RPM					
PTO Shaft	35E		55E			
Shear Bolt	3/8" x 1" GR8 Bolts					
PTO Maximum Operating Angle	15°					
Hitch Jack	5000 lbs Side Winder					
Upper/Lower Gearbox Oil Capacity	0.9 US quarts (0.85 L)					
Speed Reducer Gearbox Oil Capacity	2.65 US quarts (2.5 L)					
Replacement Hose & Hose Ends, Minimum Strength (Working Pressure)	2500 PSI (17200 kPa)					
Hitch Pin (Minimum)	1" x 5"					

Table 4. X-Tend Specifications


Specification	X-Tend 13		
Tractor Hydraulic Flow	Adjust to 8 GPM		
Tractor PTO Speed	540/1000 rpm		
Hopper Height	12"		
Hopper Length	50"		
Hopper Width	36"		
Total Swing Weight	1500 lbs		
Weight on Lift Arm	800 lbs		
Power Swing Tire Pressure	20 psi		
PTO Operating Range	24"		

10. Appendix

10.1. Power Swing Remote Transmitter Instructions

Figure 33 shows the controls and indicators for the power swing remote and receiver.

Figure 33. Remote Transmitter and Receiver Controls and Indicators

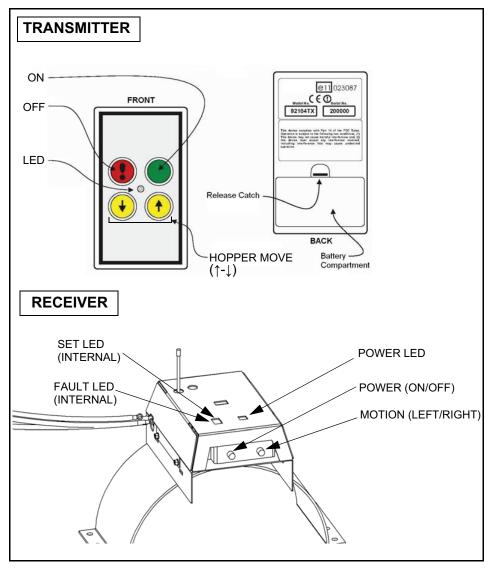

Important

The transmitter LED blinks on and off when the transmitter and receiver are active (turned on by the transmitter) and no other button is pressed. The LED turns fully on while a transmitter button is pressed, unless the transmitter battery is low, in which case the LED pulses on and off.



The transmitter automatically transmits a **STOP** signal after 30 minutes; this de-activates the receiver and the transmitter keypad.



The remote transmitter that comes with each power swing is normally factory programmed to function with the power swing receiver. Refer to specific instructions for programming additional or replacement remotes according to the serial number of the power swing receiver.

10.2. Programming Receivers

Turn on all the remote transmitters before programming.

Note

To de-register all remote transmitters from the receiver, hold down the OFF button on a remote for at least 60 seconds.

TO REGISTER THE FIRST REMOTE TRANSMITTER:

1. Switch OFF the receiver.

Important

Steps 2 and 3 must be done within 10 seconds of each other. The FAULT LED on the receiver flashes for the duration of the registration window.

- 2. Switch ON the receiver.
- 3. On the first remote, press the ON button and the yellow Down-Arrow Motion button at the same time and hold until the red light on the receiver SET LED illuminates solid red. Release buttons. The remote is programmed, and should be set aside.

TO REGISTER A SECOND REMOTE TRANSMITTER:

1. Switch OFF the receiver.

Important

Steps 2 and 3 must be done within 10 seconds of each other. The FAULT LED on the receiver flashes for the duration of the registration window.

- 2. Switch ON the receiver.
- 3. On a 2nd remote, press and release the ON button once, then press the ON button and the Down-Arrow Motion button at the same time and hold until the red light on the receiver SET LED illuminates solid red. Release buttons. The remote is programmed, and should be set aside.

TO REGISTER A THIRD REMOTE TRANSMITTER:

1. Switch OFF the receiver.

Important

Steps 2 and 3 must be done within 10 seconds of each other. The FAULT LED on the receiver flashes for the duration of the registration window.

- 2. Switch ON the receiver.
- 3. On a 3rd remote, press and release the ON button twice, then press the ON button and the Down-Arrow Motion button at the same time and hold until the red light on the receiver SET LED illuminates solid red. Release buttons. The remote is programmed, and should be set aside.

TO REGISTER A FOURTH REMOTE TRANSMITTER:

1. Switch OFF the receiver.

Important

Steps 2 and 3 must be done within 10 seconds of each other. The FAULT LED on the receiver flashes for the duration of the registration window.

- 2. Switch ON the receiver.
- 3. On a 4th remote, press and release the ON button three times, then press the ON button and the Down-Arrow Motion button at the same time and hold until the red light on the receiver SET LED illuminates solid red. Release buttons. The remote is programmed, and should be set aside.

10.3. How to Charge the Lift System

Important

The hydraulic cylinders are shipped without oil and must be charged with oil before auger is put into operation.

The cylinder will require about 19 L (5 US gallons). Check your tractor's operation manual for correct oil type and specifications.

Before charging cylinders, ensure that:

- Tractor is correctly hooked up.
- Hydraulic hoses are connected.
- Shut-off valve is open.
- Auger is parked on level ground.
- 1. Start with the tractor's hydraulic oil level in a normal operating range.
- 2. Add about 4 L (1 US gallon) to the tractor's hydraulic oil reservoir.
- 3. Start tractor, then raise auger until the lift-assist is fully extended and track shoe has moved about 1' from trackstop.

Note

Do not raise auger in high winds.

- 4. With tractor still running, lower auger to full down position.
- 5. Repeat steps 2, 3, and 4 until about 19 L (5 US gallons) have been added and tractor hydraulic oil level in the reservoir remains within the operating range.

10.4. Open/Closed-Center Valve Conversion

Note

The standard configuration for the control valve is closed-center. The closed-center plug is pre-installed when delivered from AGI.


The control valve can be converted from the closed-center to the open-center configuration by removing the conversion plug.

- Remove outlet plug to access the closed-center plug.
- Remove the closed-center conversion plug for open-center operation.
- Re-install outlet plug.

Note

Retain the conversion plug that was removed for future use.

Conversion Plug Location

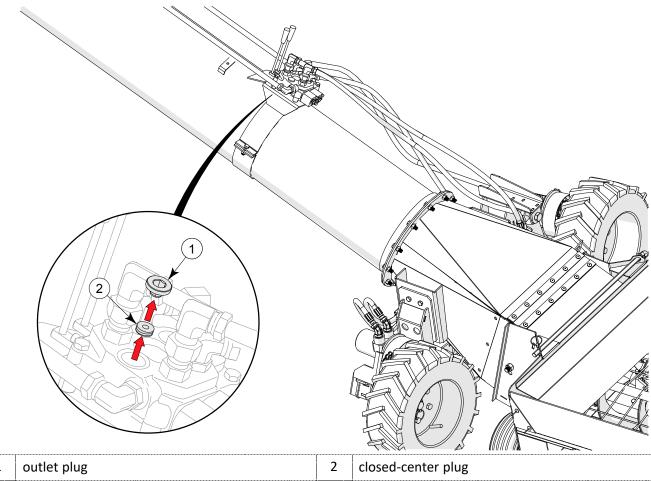

108 31175 R3

11. AGI Limited Warranty

This warranty relates to AGI Augers (the "Product") sold by AGI, (referred to herein as the "Seller") and applies only to the first user of the Product (meaning a purchaser directly from the Seller or from an authorized dealer or distributor of the Product, referred to herein as the "Buyer").

This warranty shall only be effective if properly registered with the Seller in accordance with information provided to the Buyer at the time of sale.

- 1. The Seller warrants to the Buyer that the Product is free from defects in material and workmanship **under normal and reasonable use**.
- 2. This warranty applies only to defects in materials and workmanship and not to damage incurred in shipping or handling, through normal wear and tear, or damage due to causes beyond the control of the Seller such as lightning, fire, flood, wind, earthquake, excessive voltage, mechanical shock, water damage, or damage arising out of abuse, alteration, improper assembly, improper installation, improper maintenance or improper repair of the Product.
- 3. The warranty period for the Product shall be two years from delivery of the Product to the Buyer where the Product is used in a normal farm operation. First year of warranty coverage of parts and labour, second year warranty coverage of parts only. Warranty period for the Product shall be 90 days from delivery of the Product to the Buyer where the Product is used in a commercial operation. In the event that any part incorporated into the Product is manufactured and sold to the Seller by a third party vendor, such part is only warranted to the extent of the warranty given by that third party.
- 4. The obligations set forth in this warranty are conditional upon the Buyer promptly notifying the Seller of any defect and completing reasonably required documentation and, if required, promptly making the Product available for correction. The Seller shall be given reasonable opportunity to investigate all claims and no Product shall be returned to the Seller or part disposed of until after inspection and approval by the Seller and receipt by the Buyer of written shipping instructions, with transportation charges prepaid.
- 5. Upon return of the Product, or such part of the Product that requires correction, the Seller shall, at the Seller's option, either repair or replace the Product or such part. The Seller shall replace or attempt to repair and return the Product or such part within a reasonable period of time from receipt of an approved warranty claim from the Buyer. If the Seller is unable to repair or replace the Product, the Buyer shall be entitled to a credit note in the amount of the purchase price for the Product.
- 6. The total liability of the Seller on any claim, whether in contract, tort or otherwise, arising out of, connected with, or resulting from the manufacture, sale, delivery, repair, replacement or use of the Product or any part thereof shall not exceed the price paid for the Product and the Seller shall not be liable for any special indirect, incidental or consequential damages caused by reason of the installation, modification, use, repair, maintenance or mechanical failure of the Product. Consequential or special damages as used herein include, but are not limited to, lost or damaged products or goods, costs of transportation, lost sales, lost orders, lost income, increased overhead, labor and incidental costs and operational inefficiencies.
- 7. Notwithstanding anything contained herein to the contrary, the foregoing is the Buyer's sole and exclusive remedy for breach of warranty by the Seller in respect of the Product. The Seller, for itself, its agents, contractors, employees and for any parent or subsidiary of the Seller, expressly disclaims all warranties, either express or implied, written or oral, including implied warranties of merchantability or fitness for a particular purpose and undertakes no obligation with respect to the conformity of the Product except as set out in the purchase agreement, if any, or marketing materials.
- 8. The foregoing warranty is the entire warranty of the Seller to the Buyer and the Buyer shall not be entitled to rely upon any representation or warranty contained in any marketing material of the Seller in respect of the Product. The Seller neither assumes, nor authorizes any other person purporting to act on its behalf to modify or to change this warranty, nor to assume for it any other warranty or liability concerning the Product.

WARRANTY VOID IF NOT REGISTERED

AGI is a leading provider of equipment solutions for agriculture bulk commodities including seed, fertilizer, grain, and feed systems with a growing platform in providing equipment and solutions for food processing facilities. AGI has manufacturing facilities in Canada, the United States, the United Kingdom, Brazil, South Africa, India and Italy and distributes its products globally.



P.O. Box 39, Rosenort, Manitoba, ROG 1W0 Canada **P** 866.467.7207 (Canada & USA) or 204.746.2396 | **F** 866.768.4852 | **E** sales@grainaugers.com

AGGROWTH.COM aggrowthintl

in f

in f

in

©Ag Growth International Inc. 2025 | Printed in Canada

If you have any comments or questions on this manual, or find an error, email us at comments@aggrowth.com. Please include the part number listed on the cover page in your message.